

 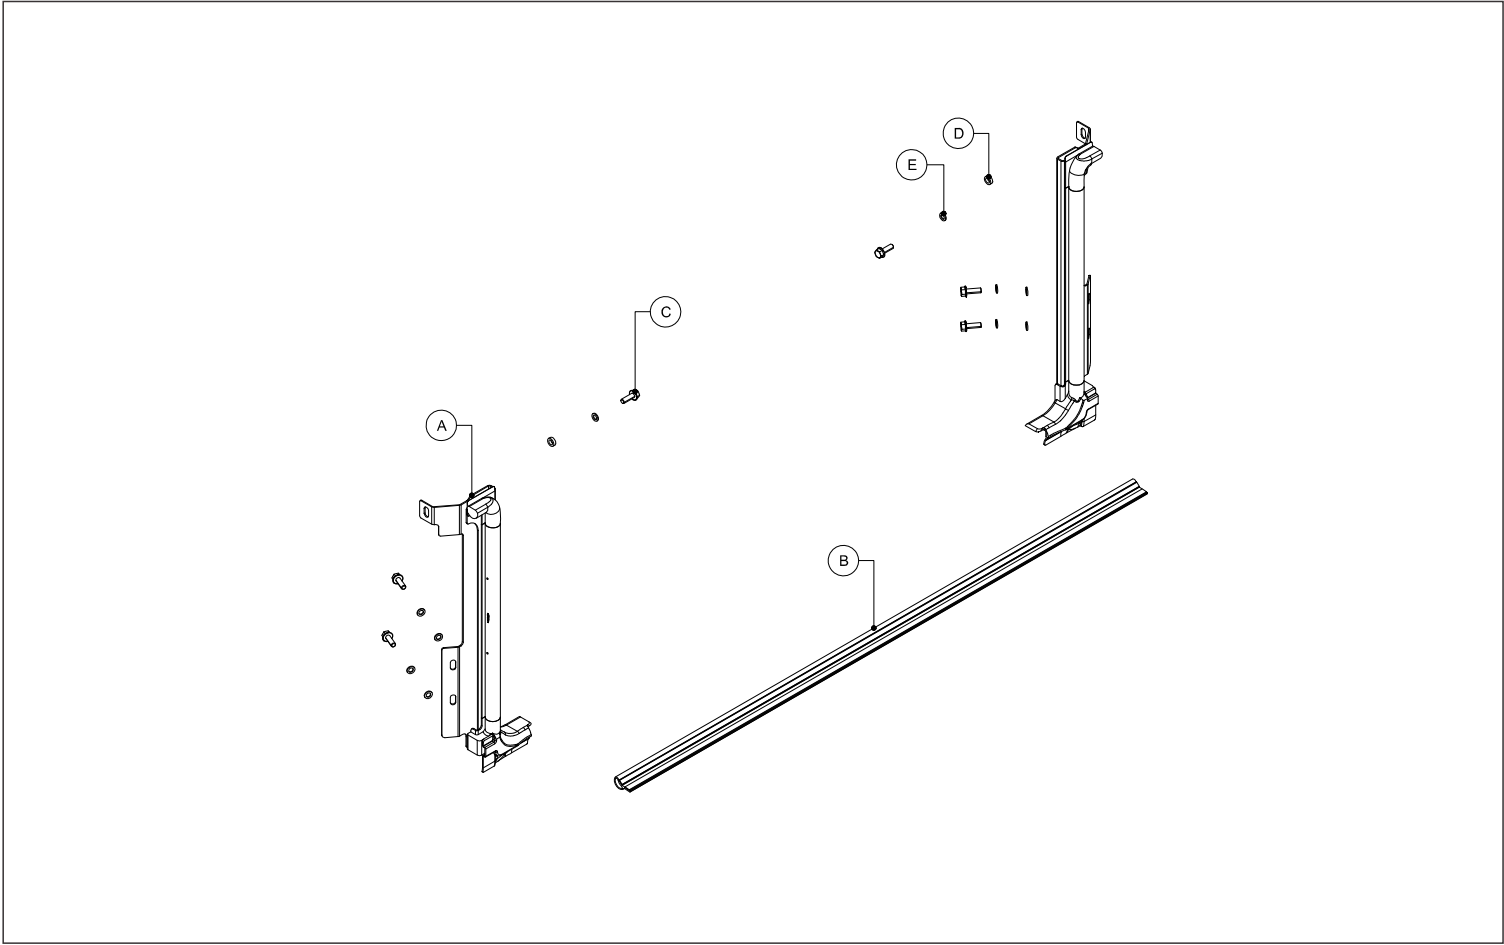
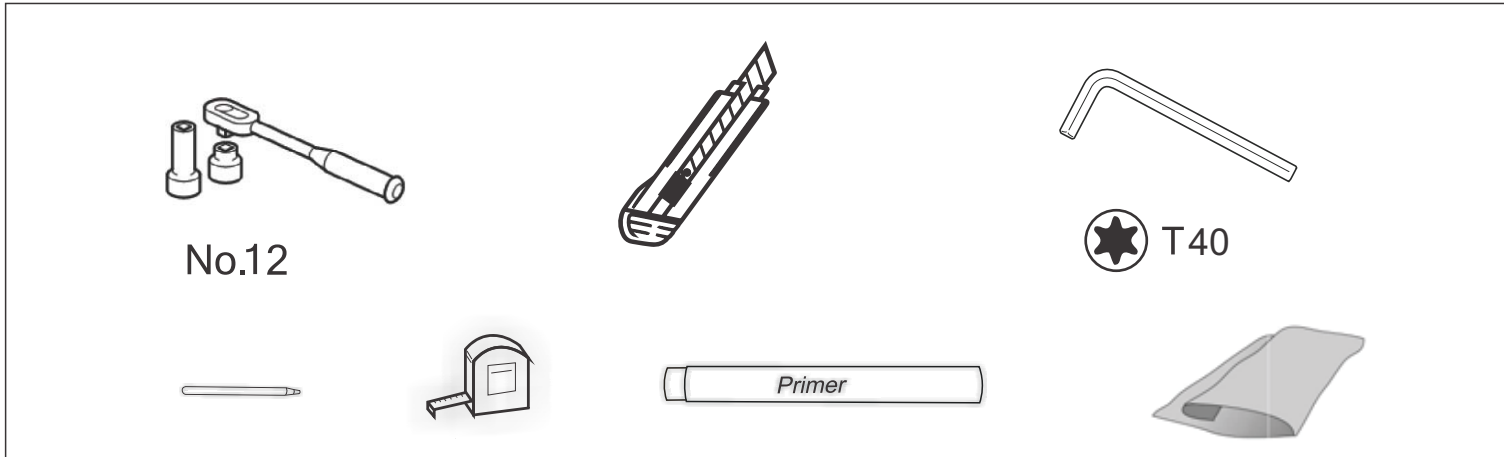






INSTALLATION TOOLS

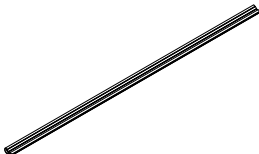






PART LIST

A	1L&1R	B	1 Pcs.	C	6 Pcs.	D	2 Pcs.	E	6 Pcs.
									


1

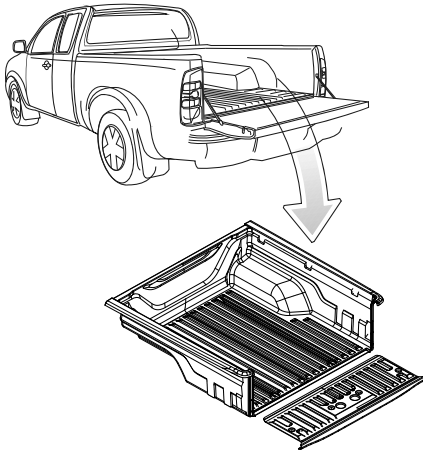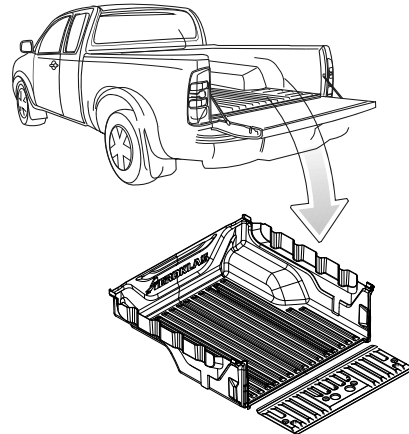LINER OVERRAIL**LINER UNDERRAIL**


2

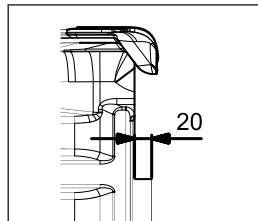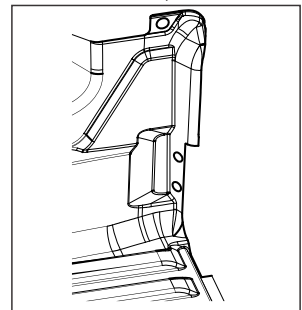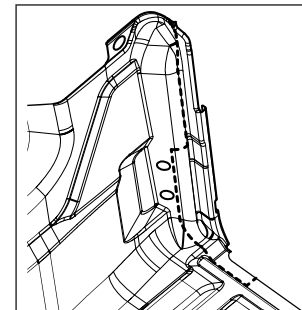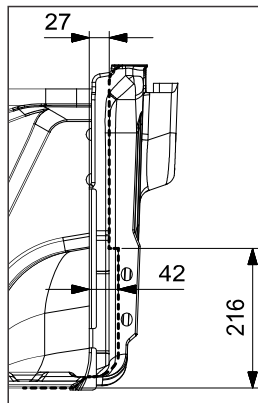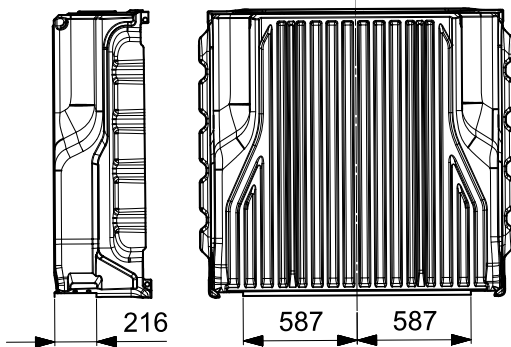DIMENSION FOR CUT LINER


3

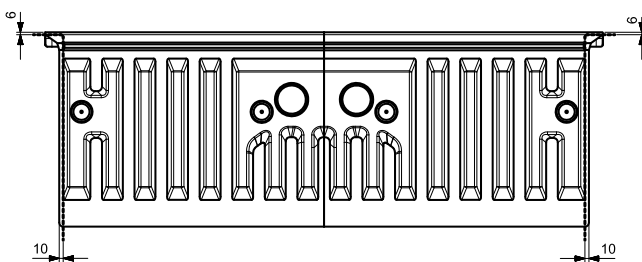DIMENSION FOR CUT TAILGATE LINER OVERRAIL


4

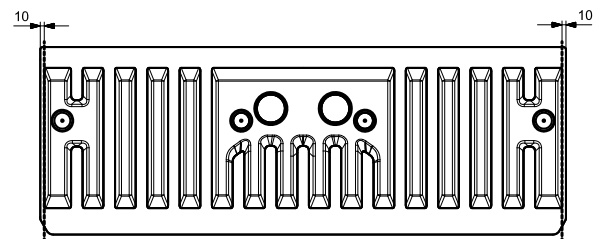DIMENSION FOR CUT TAILGATE LINER UNDERRAIL


5

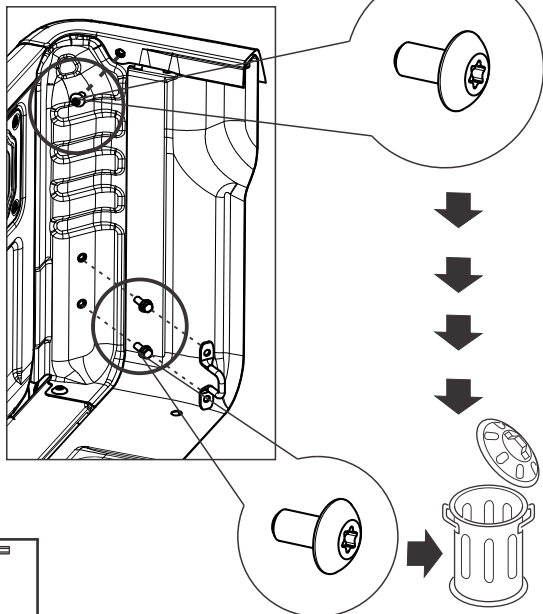


6

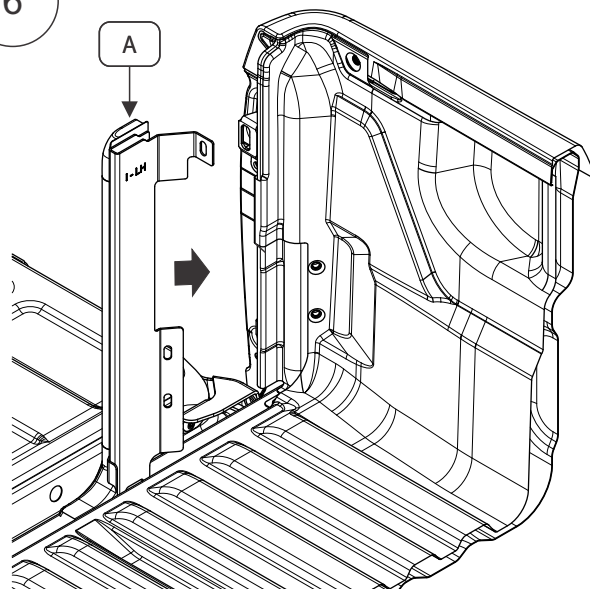





7

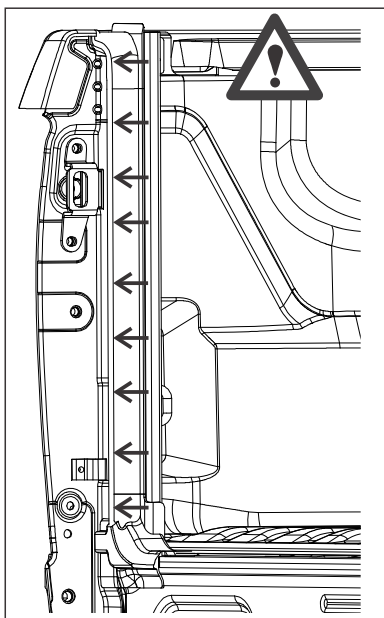

- Should check the attachment between the Bracket and the pickup truck,
Before locking the screws.
- NO Gap.

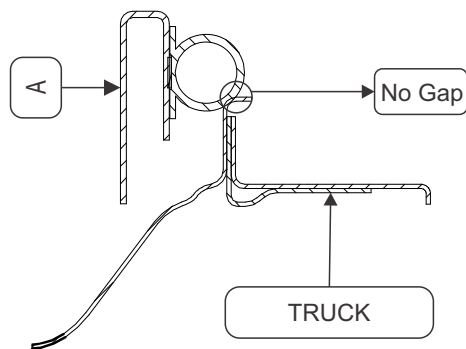

8

 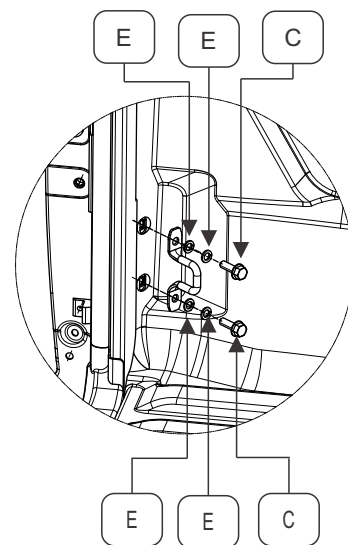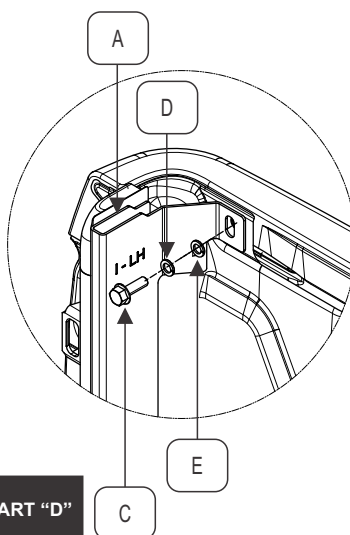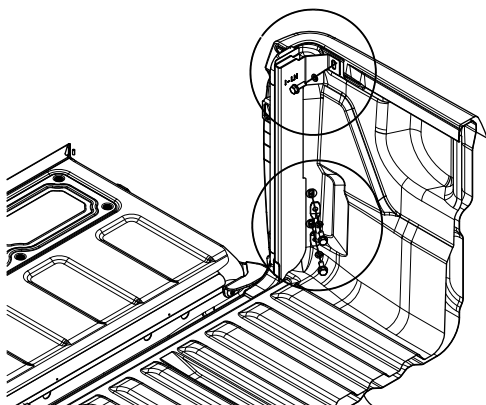


No.12

(15Nm.)

- ASSEMBLY WITH LINER REMOVE PART "D"

- ASSEMBLY WITH OUT LINER USE PART "D"

9 Clean the sticking point and apply primer.


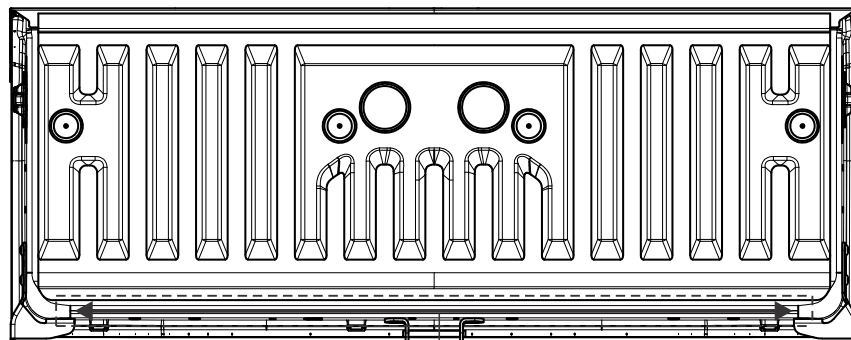


Clean here for apply primer


Primer



10

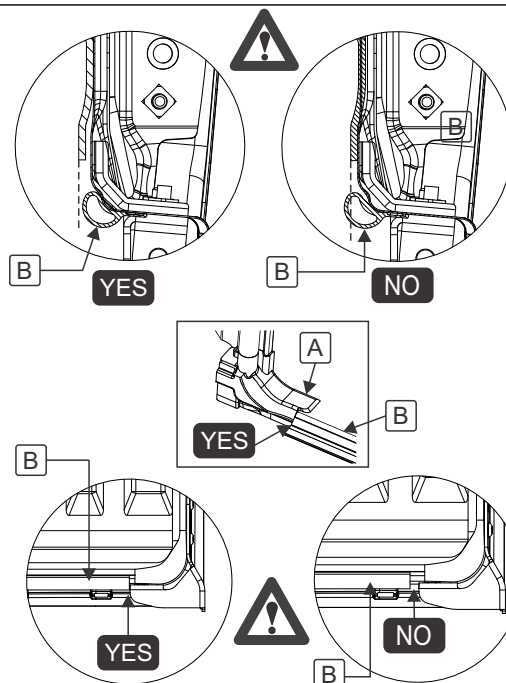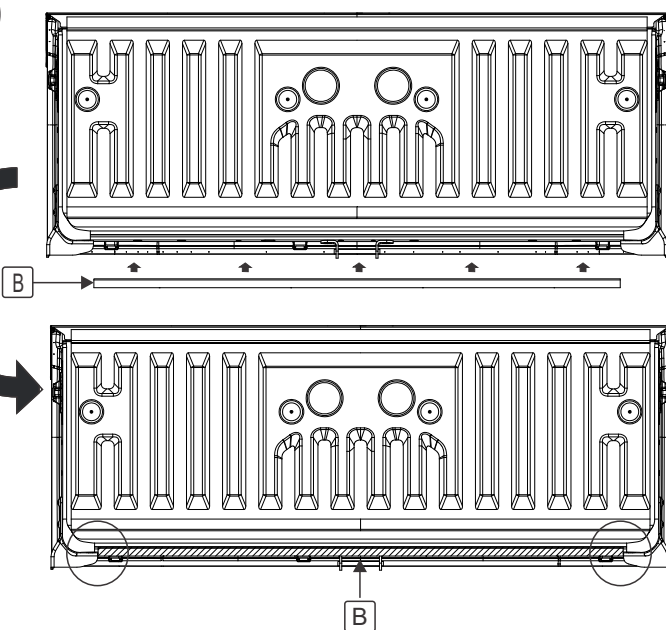

11

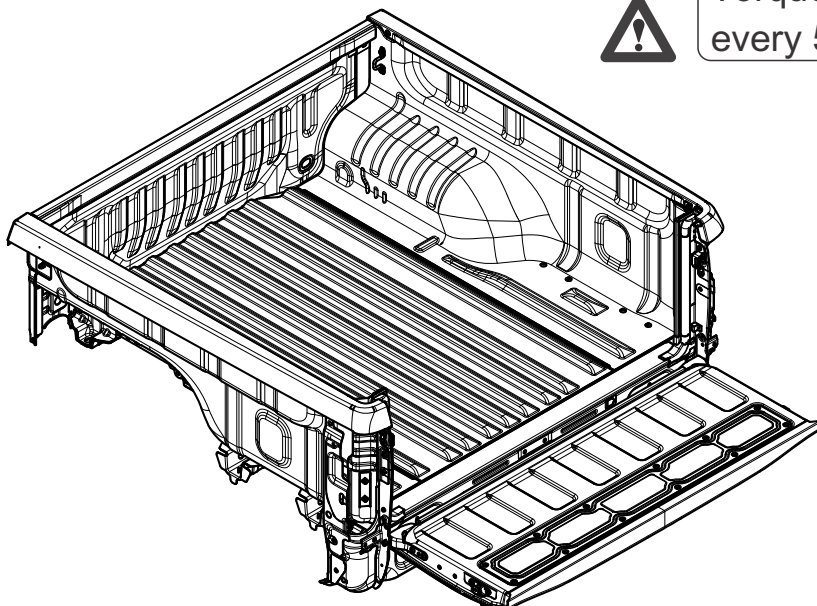

Torque should be checked every 5000 km.