


Aeroklas Canopy Track System ARKT01, ARKT03-ARKT09

Important:


- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 1.5 hours

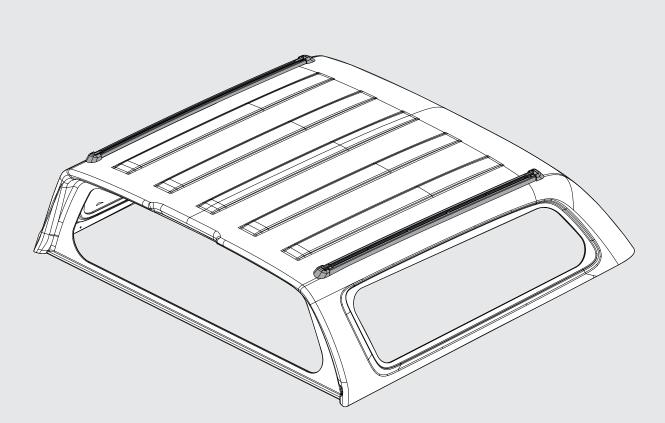

RHINORACK.COM

Document No: R380 Issue No: 19 Issue Date: 31/03/2023

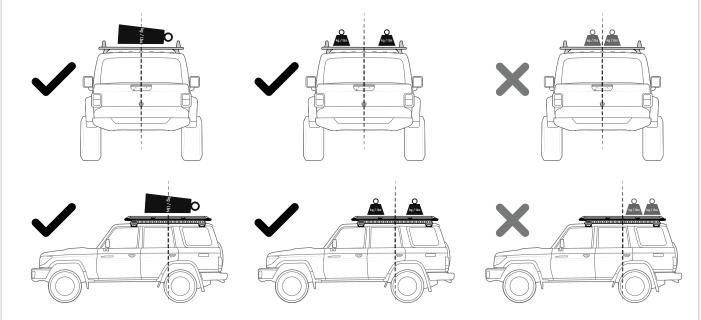



Distribute loads evenly and laterally/longitudinally as low as possible over the span.


Avoid point loads concentrated at the front or rear.


Exercise extreme care when transporting wind-resistant loads. Special consideration must be taken when cornering and braking.


Off-road conditions can be much more rigorous. Extreme care must be taken on any driven path that does not contain a surface protection layer (tar/bitumen).

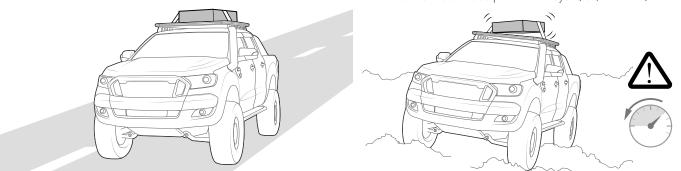

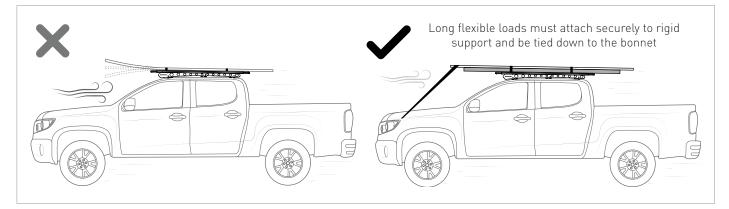


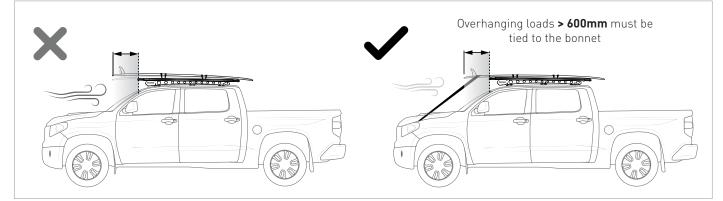

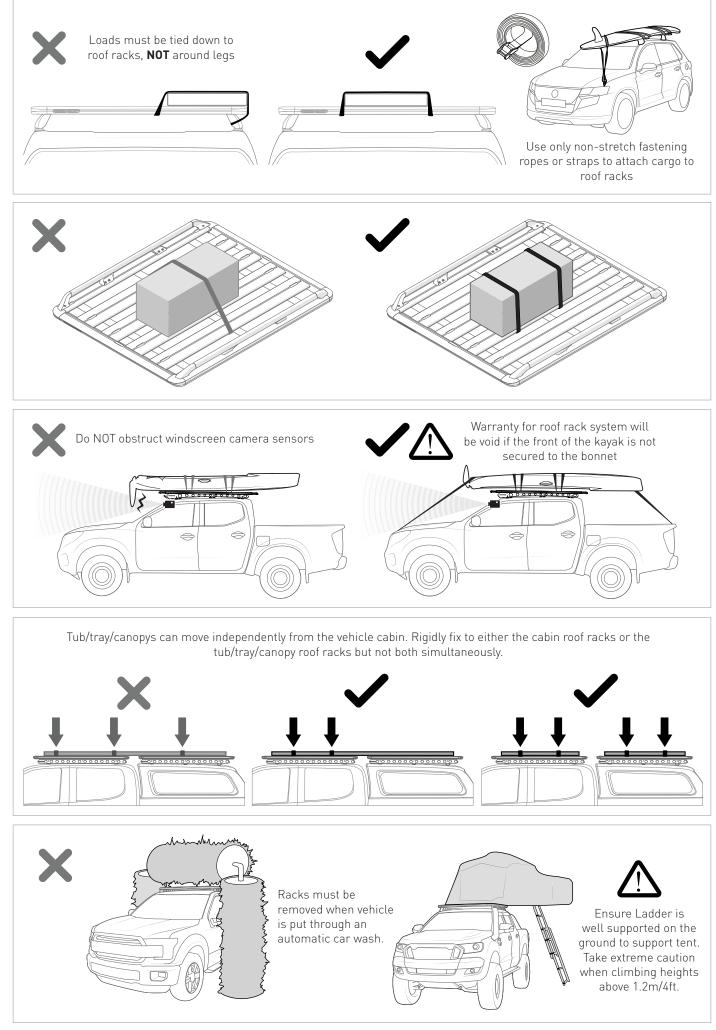

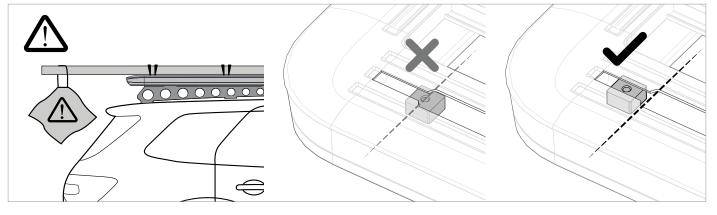



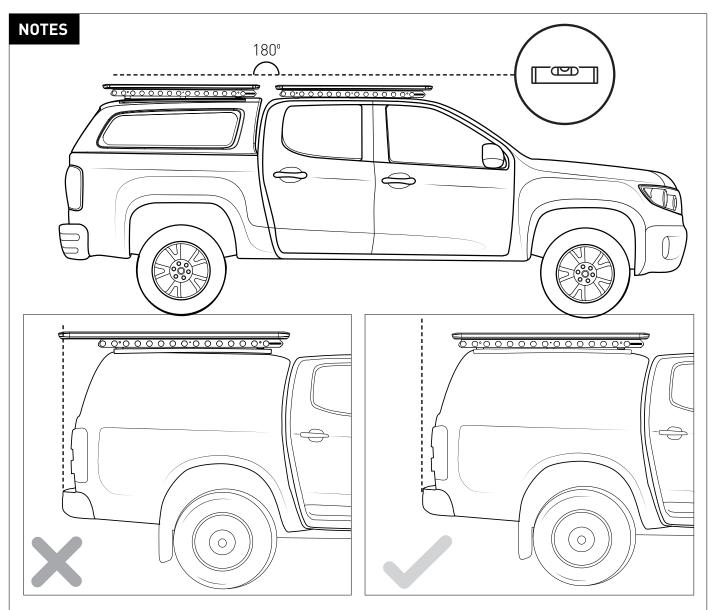

Page 4 of 11

Maximum Carrying Capacity

Please refer to your vehicle manufacturers handbook for maximum carrying capacity. Always use the lower of the two figures. Load must be evenly distributed Weight of roof rack accessories is to be included in cargo allowance.

Roof Allowance	On Road Cargo Allowance	Off Road Cargo Allowance	Rack Weight
Up to 70-80kg/154-176lb	Roof Allowance - Rack	On Road Cargo Allowance /	5kg / 11lb
(canopy dependant)	Weight	1.5	

Off Road: Roof Allowance:	Any driven path taken that is not on sealed (tarred / bitumen) and maintained Total permissible weight attached to the roof of the car. This is inclusive of the weight of the roof rack system
Cargo Allowance:	Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion
Static Allowance:	Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is
	stationary

Warning:

- Check Part No. and/or Kit is correct for use with your vehicle
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.
- The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.

In Service Maintenance Check

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:







Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the roof racks.

Note for Dealers and Fitters

It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Join The Herd!

We love creating our products for you and hope you love using them too. For complete peace of mind, register your product at www.rhinorack.com/warranty. This way, we can quickly help you with any future approved fitment warranty claims.

And remember – never to forget to Make Space For Adventure!

Parts List

	\sim									
							Vehicle		Kit Use	ed 🛛
A		В					D-Max Ge Colorado G	n2/ en2	ARKTO	1
						Amarok		ARKTO	16	
				С			Hilux Ger	17	ARKTO	15
		é					Navara D	40	ARKTO	13
				\frown		-	Triton 07/06 -	04/15	ARKTO	14
		D	\bigcirc	\bigcirc	G		Triton 04/1	ōon	ARKTO	17
			\bigcirc				Navara NP	300	ARKTO	18
		(F		Hilu	x Gen8 Dual on	Cab 10/15	ARKTO	19
			_			D- B	Max Gen3 Cr T-50 Gen3 Di	ew Cab/ Jal Cab	ARKTO	19
			\bigcirc	E						
	د ^{ر ب}	H	9 S							
	6 2 6 2		0	J						
ltem	Componen	nt Name	ARKT01	K ARKT03	ARKT04	ARKT05	ARKT06	ARKT07	ARKT08	ARKT09
Α	Track - Right		1	1	1	1	1	1	1	1
В	Track - Left		1	1	1	1	1	1	1	1
С	C M6 x 20mm T-Bolt		16	12	14	12	8	16	16	16

Item	Component Name	ARKT01	ARKT03	ARKT04	ARKT05	ARKT06	ARKT07	ARKT08	ARKT09
Α	Track - Right	1	1	1	1	1	1	1	1
В	Track - Left	1	1	1	1	1	1	1	1
С	M6 x 20mm T-Bolt	16	12	14	12	8	16	16	16
D	1/4 x 3/4 Flat Washer	16	-	14	-	8	16	16	16
E	M6 Nyloc Nut	16	-	14	-	8	16	16	16
F	M6 Flanged Nut	-	12	-	12	-	-	-	-
G	M6 x 16mm Flat Washer	-	12	-	12	-	-	-	-
H	Track End Cap	2	2	2	2	2	2	2	2
I	Track End Cap	2	2	2	2	2	2	2	2
J	Butyl Patch 20 x 20	16	12	14	12	8	16	16	16
K	Canopy Plug	-	12	-	12	-	-	-	-


Tools Required


T1 - Masking Tape

- T2 Marker
- **T3** Tape Measure **T7** 10mm wrench
- T4 Drill with 6.5mm/ T8 Torque Wrench 1/4" drill bit
- T5 Soldering Iron
- T6 Spirit Level
- - **T9** Vacuum

Safety Gear




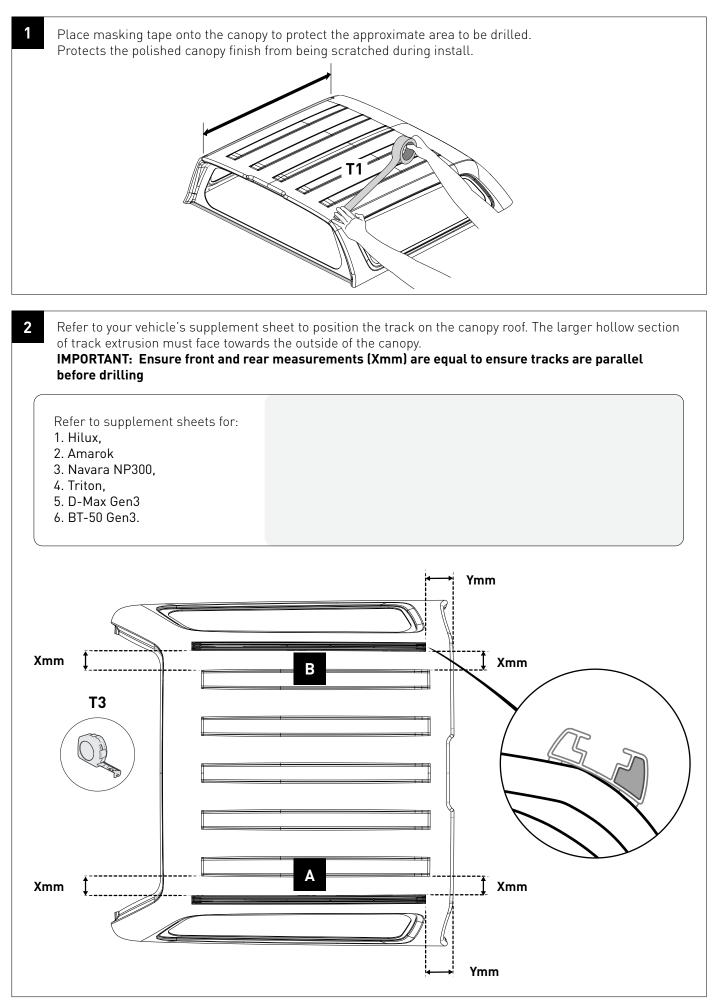


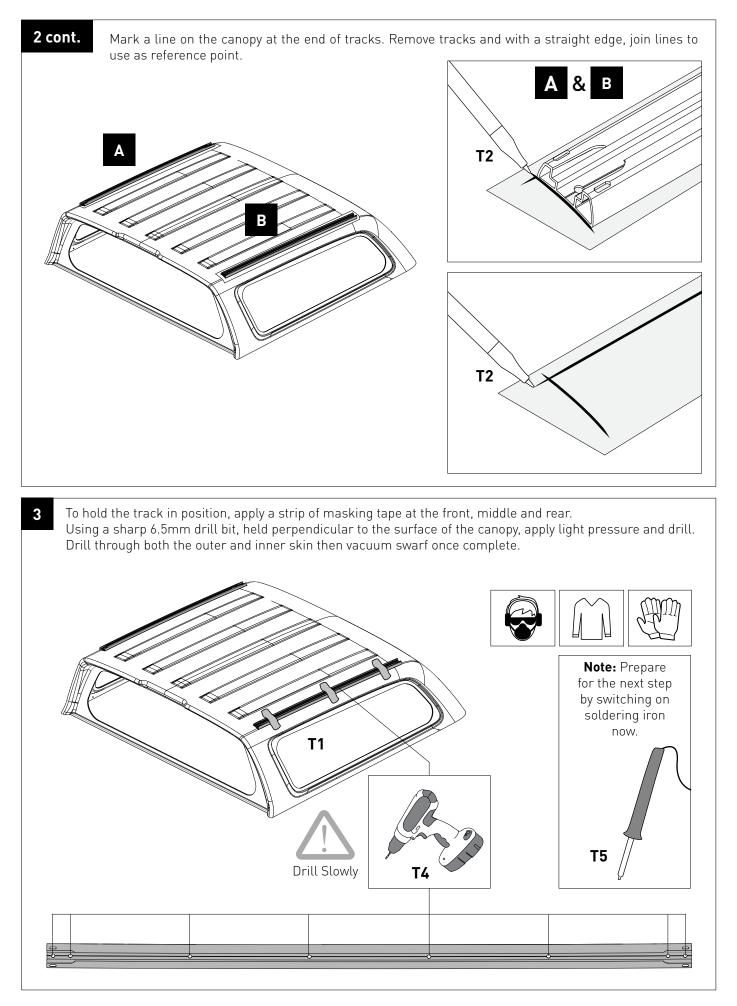


4


Using a soldering iron, slowly run the hot tip around the circumference of the drilled hole three times. This will seal the ABS from any microcracks that may occur after drilling.

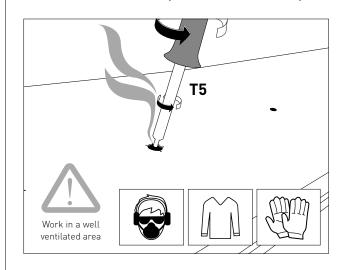

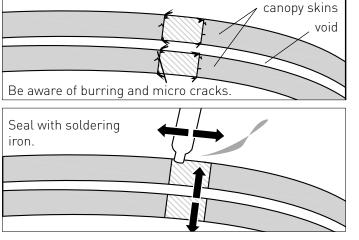



5 To install the end caps, push the top tabs of the end cap through the slots in the track as shown. (A non-oil based lubricant may be used to assist pushing the tabs through). Ensure that the lower tongue is positioned underneath the track and align with the hole.

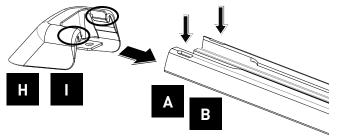


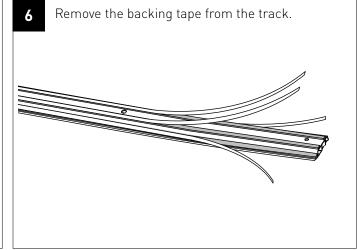

7 It is required to apply Butyl Patches to the holes drilled in the outer skin before fixing the track. Remove the masking tape from the roof of the canopy and clean the top surface with a damp microfibre cloth. Remove the backing tape from the butyl patches and place over drilled holes in the canopy.

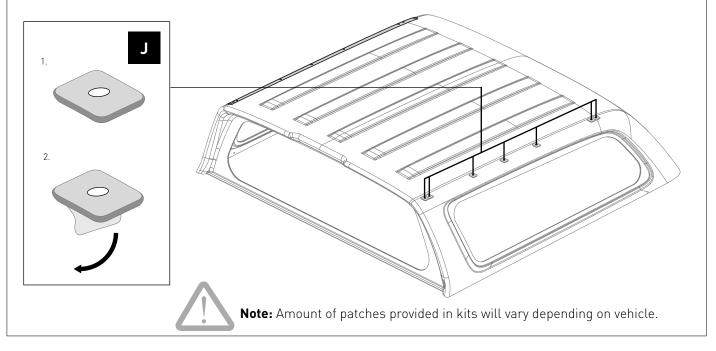

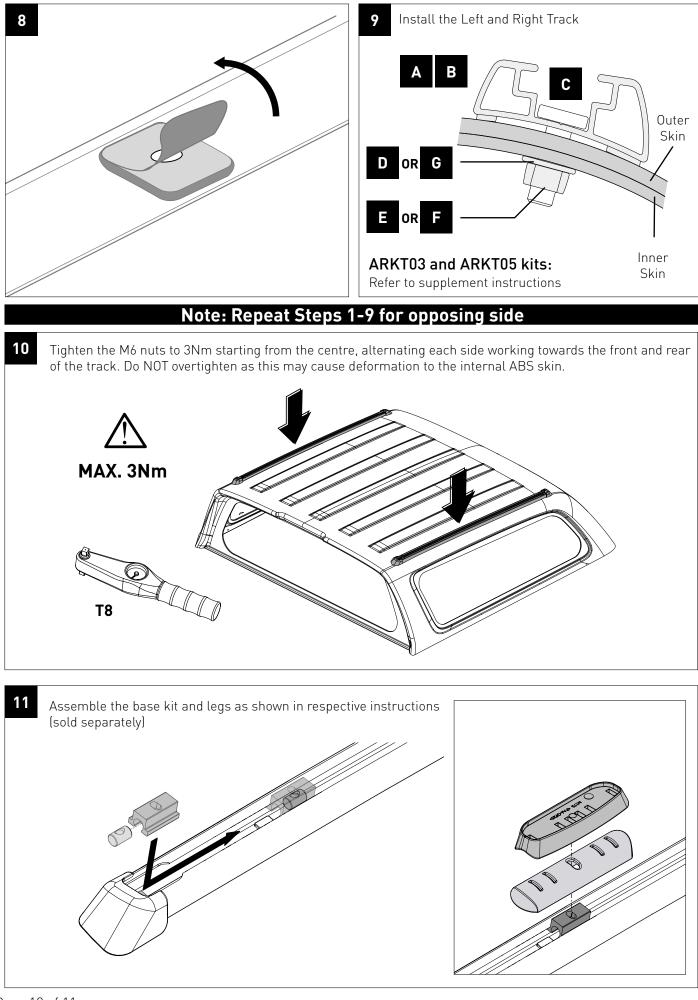

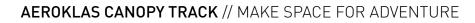

NOTES





RHINORACK.COM

Rhino-Rack AUSTRALIA 22A Hanson Pl, Eastern Creek, NSW, 2766

Rhino-Rack USA Unit D, 2450 Airport Blvd, Aurora, CO, 80011