

WWW.HSPUTELIDS.COM

Part No: NGR4RS3

INSTALLATION INSTRUCTIONS

Vehicle Model: FORD RANGER - NEW **GENERATION 07-2022 +**





INSTALLATION TIME: 1 hours and 50 minutes (Approximately)

- · Do not stand/sit or rest heavy objects on Roll R Cover
- Humans or animals are not to be under the closed cover at any given time
- Tonneau Cover is not dust or water tight
- If contact with volatile chemicals occur, clean Cover with mild detergent and water solution
- Next Gen Ford Ranger Warranty Additional Information.

IMPORTANT



If you are self installing: Please scan QR code to access important information.

If you are fitting on behalf of someone: Advise them that they must scan QR code to access important information at hand over.

Care Instructions

- Read Instructions fully before commencing installation.
- Clean Cover with a mild detergent and water solution
- · Do not use abrasive cleaners or solvents
- · Refer to manufactures instructions applicable to power drill.
- Protect Tub floor against scratches during installation process.

Maintenance

Refer to Maintenance instructions.

Tools Required

- Pen / Marker
- Centre Punch
- Drill & Drill bits Caulking Gun
- Silicon Non Acetic
- Scissors & Knife
- Spanner & Socket
- Tape measure
- Holesaw
- Filing tool

- Soapy water solution
- · Allen Key set
- Screw driver
- Rust Inhibitor
- Trim Removal Tool


PERSONAL PROTECTIVE EQUIPMENT:








BOX CONTENTS LEFT & RIGHT SIDE RAIL **CANISTER ASSEMBLY** S2.5-DC-AE-002ps-NGR42 🤅 S2.5-DC-AE-003ds-NGR42 S3-DC-AF-NGR-001/002 CANISTER TOP COVER S2.5-DC-AE-005 -NGR **NGR4R SPECIFIC KIT** COVER END CAPS (A) **७**€ S2.5-DC-PI-004ps Clear protective tape CABLE TIE Drainage pipe **BATTERY** COUNTERSUNK Qty-2 Qty x 16 Qty - 2 LOOM S2.75 S2.5-DC-PI-004ds SCREW Qty - 4 Self drilling screws M8 NUT 1 NOTCH SPACER 2 NOTCH SPACER CL-LOOM-SHORT NGR-PATCH Qty - 8 Qty - 4 Qty - 2 Qty - 4 M8 SPRING M8 WASHER WASHER M8 x 35mm **Qty - 8** Qty - 6 Qty - 6 **LEFT & RIGHT** FR22-FBA BLACK M8 x 30mm **SIDERAIL BRACE QTY - 1** Qty - 6 CLAMP Qty - 6 **BRACKET**

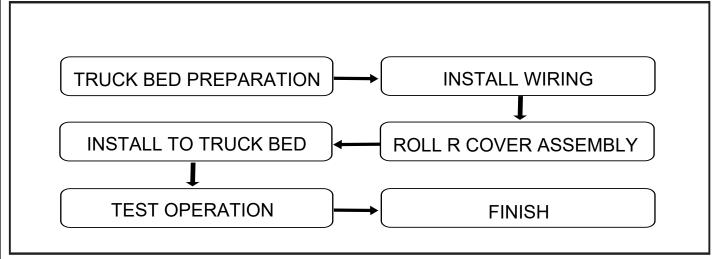

TUB PREPARATION

NOTE: Instructions may refer to one side of vehicle, repeat steps to the other side.


If the Vehicle is fitted with a headboard bar, remove from Ute Tub (truck bed). Note: Retain hardware.

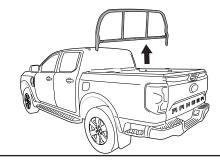


NOTE: Following steps are for vehicles fitted with a factory tailgate liner. If no tailgate liner skip to page 5.




Push the tailgate's top plastic trim to expose the inner measuring guide of the trim.

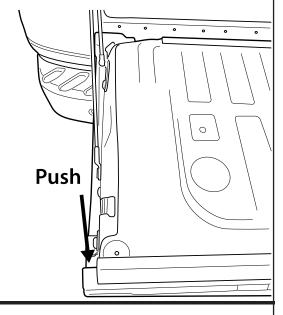



Using a plastic trim removal tool, carefully tuck the rubber molding in to the cavity behind the measuring guide.

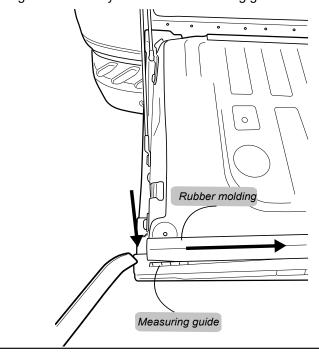



Slide plastic trim tool between cavity and rubber molding towards the other side.

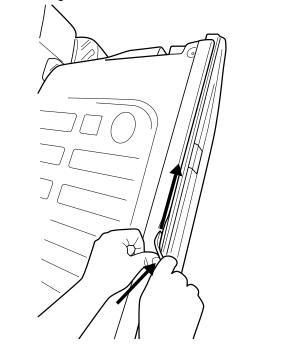


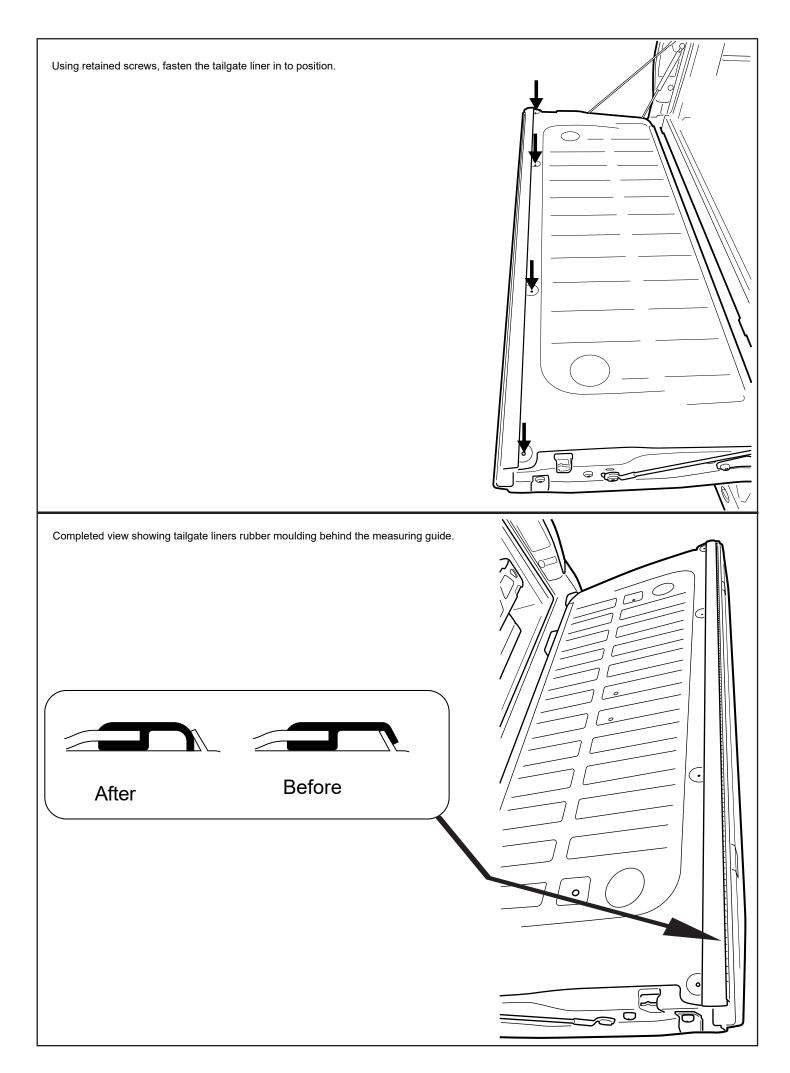

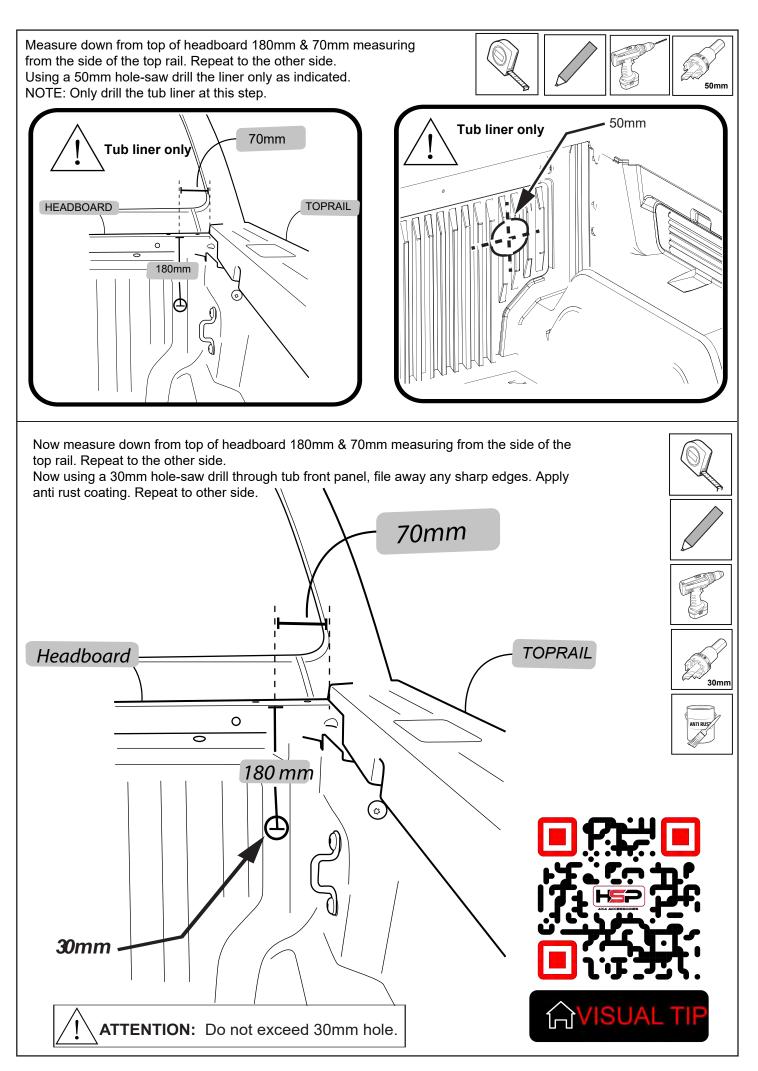


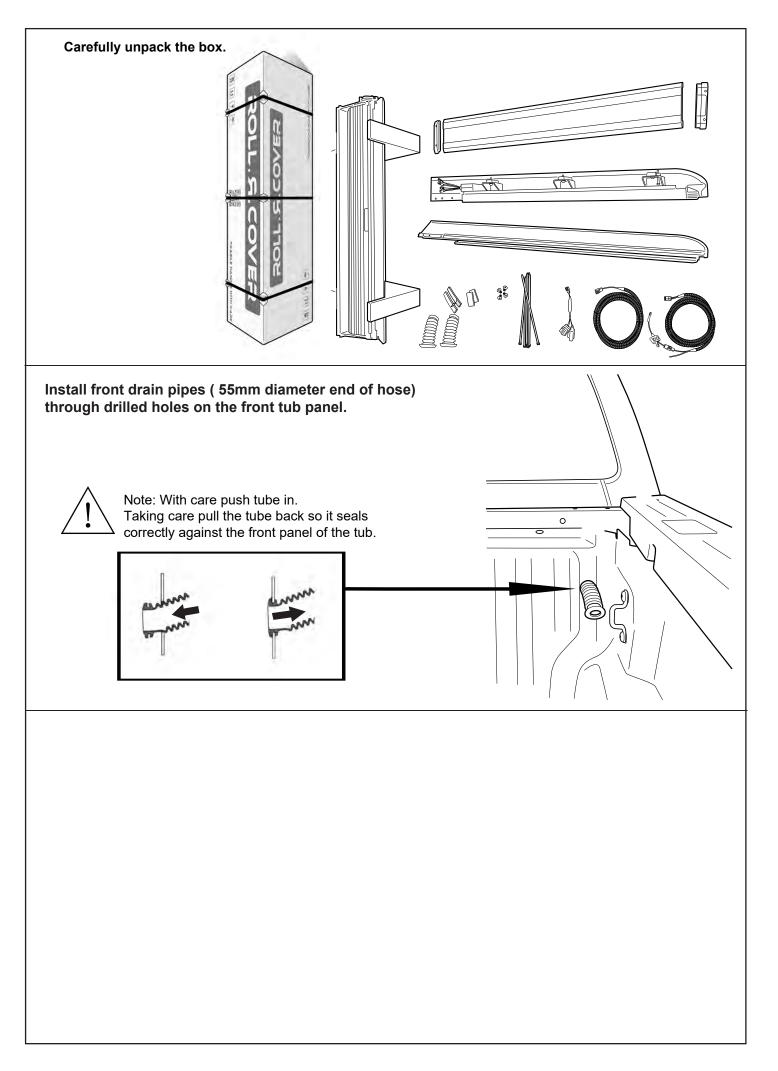

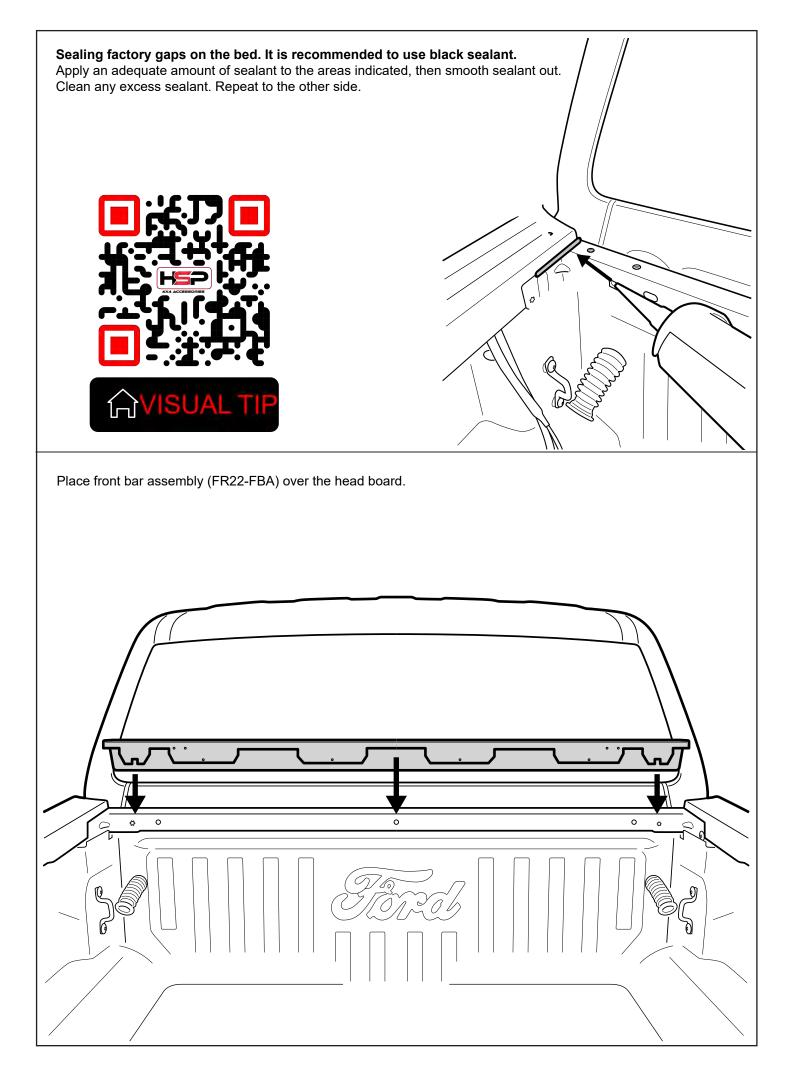


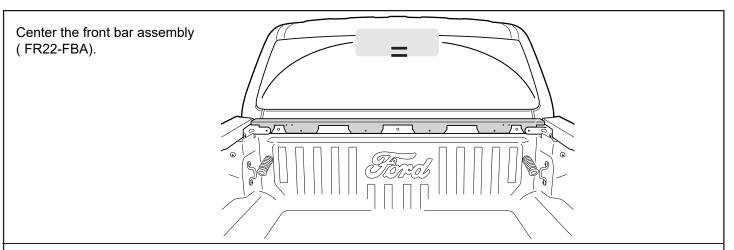


Align RHS brace bracket to the indicated threads of the tub.

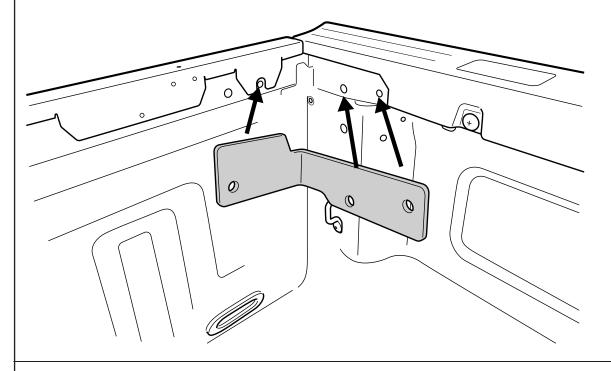

Fasten loosely into position using retained factory bolts. If factory bolts were not provided use supplied black M8 x 30mm in the kit.

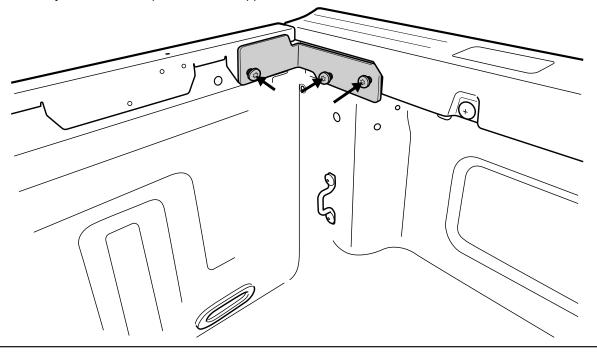


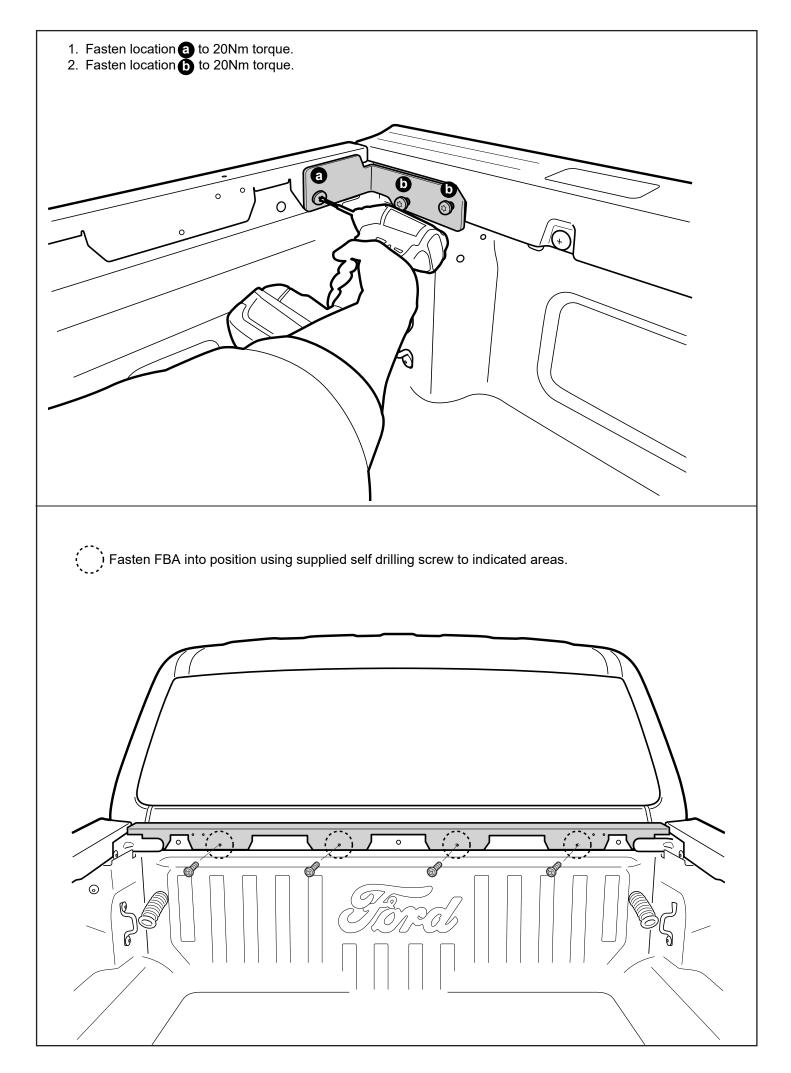

Sealing any gaps on the bed and FBA. It is recommended to use black sealant.

Apply an adequate amount of sealant to the areas indicated, then smooth sealant out.


Clean any excess sealant. Repeat to the other side.

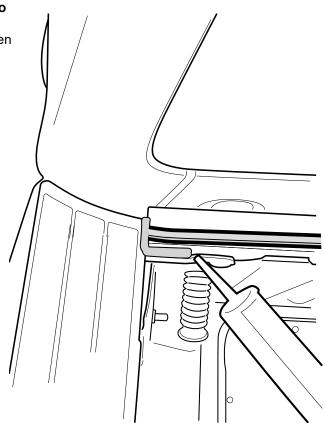



Sealing any gaps on the bed and FBA. It is recommended to use black sealant.

Apply an adequate amount of sealant to the areas indicated, then smooth sealant out.


Clean any excess sealant. Repeat to the other side.

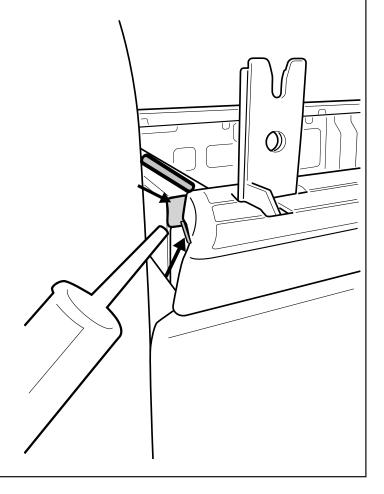

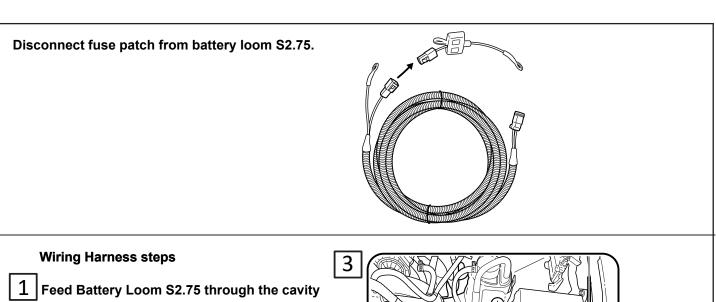


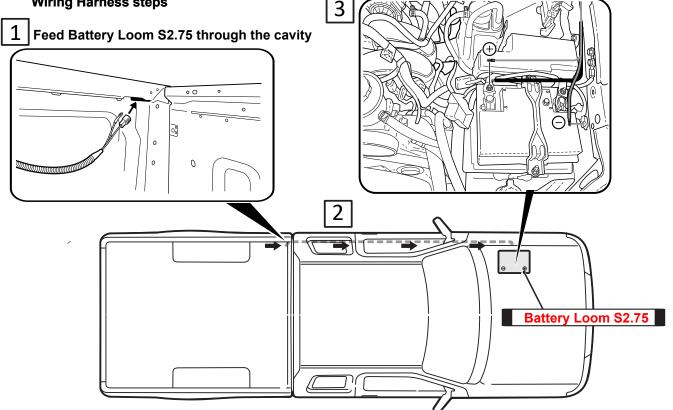

Run the wiring from the front corner cavity (leaving 200mm in the tub) to the battery over the chassis rail. Making sure to keep away from hot obstructions and cable tie every 400mm. Reconnect fuse patch to battery loom S2.75, now attach fuse patch to positive of battery and earth to the body of the Ute.

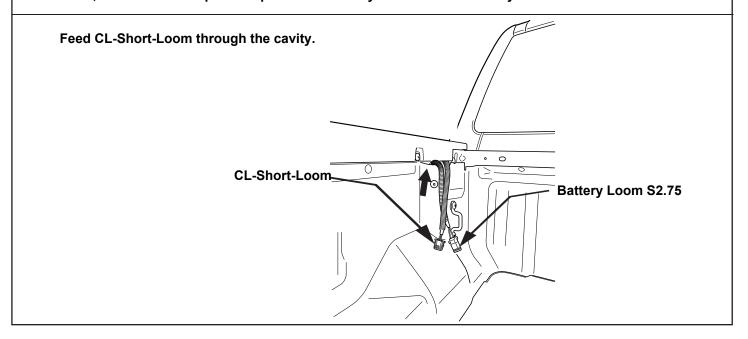


Remove required clips to gain access to passenger side rear wheel arch inner.

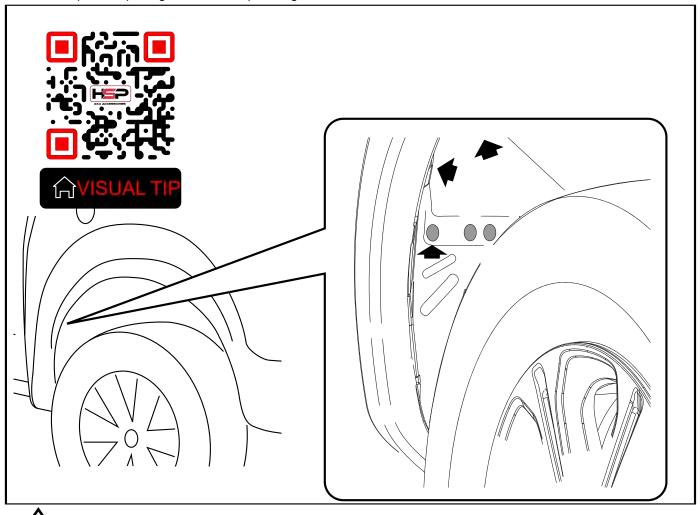



NOTE: image used is for illustration purpose only.

- 1. Disconnect the fuel flap actuator connector (1).
- 2. Patch the NGR-Patch to fuel cap actuator connector and actuator connector.
- 3. Use one zip tie to secure the harness to the existing harness.
- 4. Connect CL-Short-Loom to NGR-Patch. Zip tie any loose loom within wheel arch.

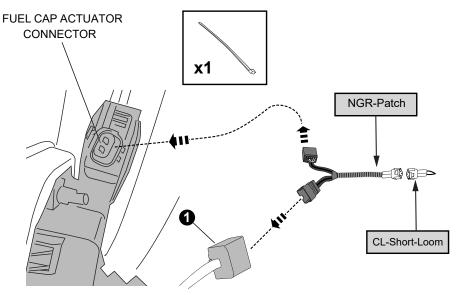



NOTE: image used is for illustration purpose only.

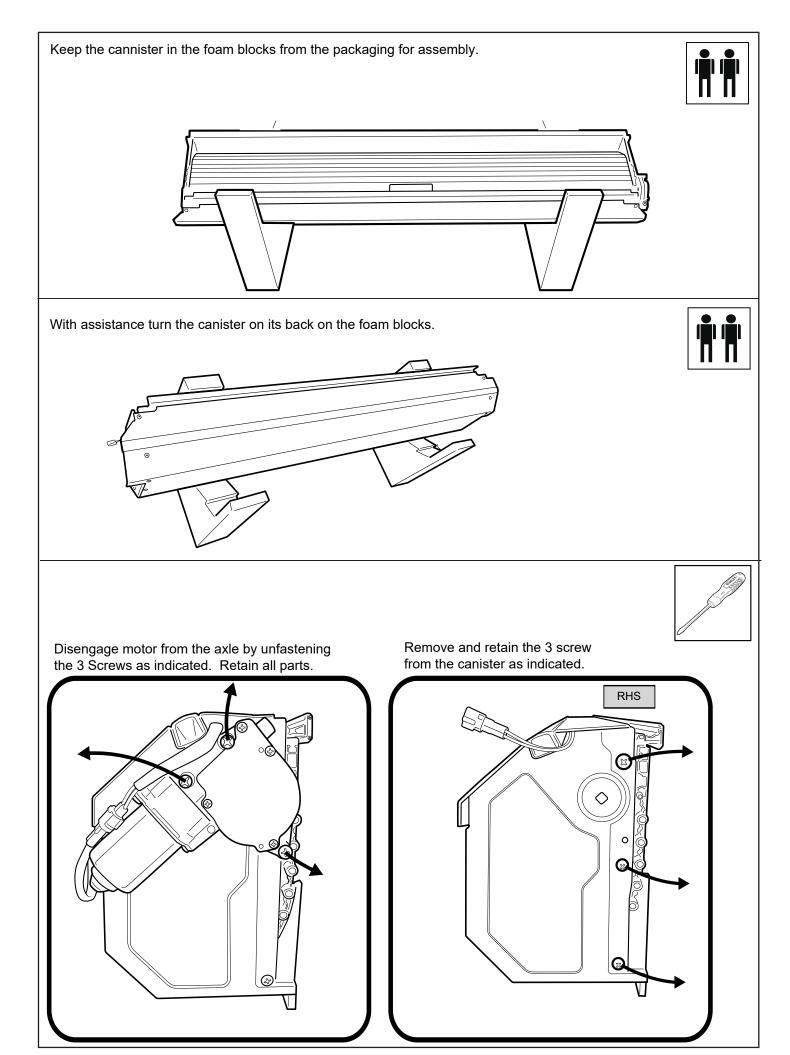


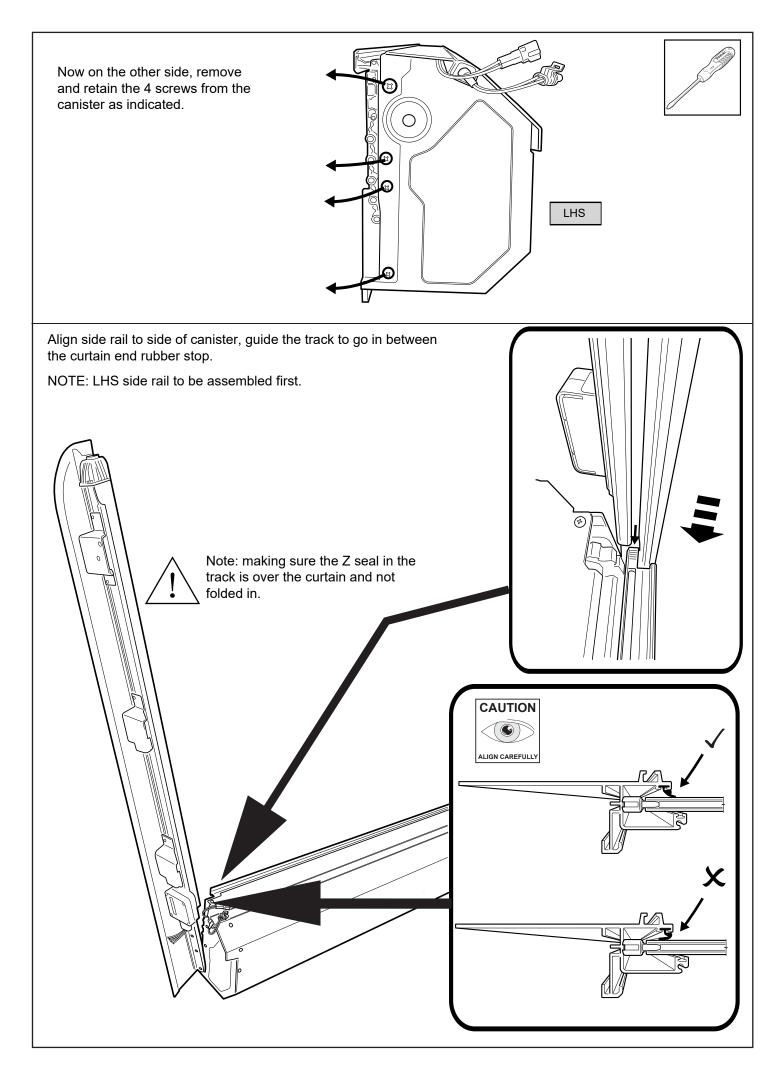


Fasten the side rail using the retained screws, spring washer and washer. Connect motor to receiver Connect LED Loom to receiver

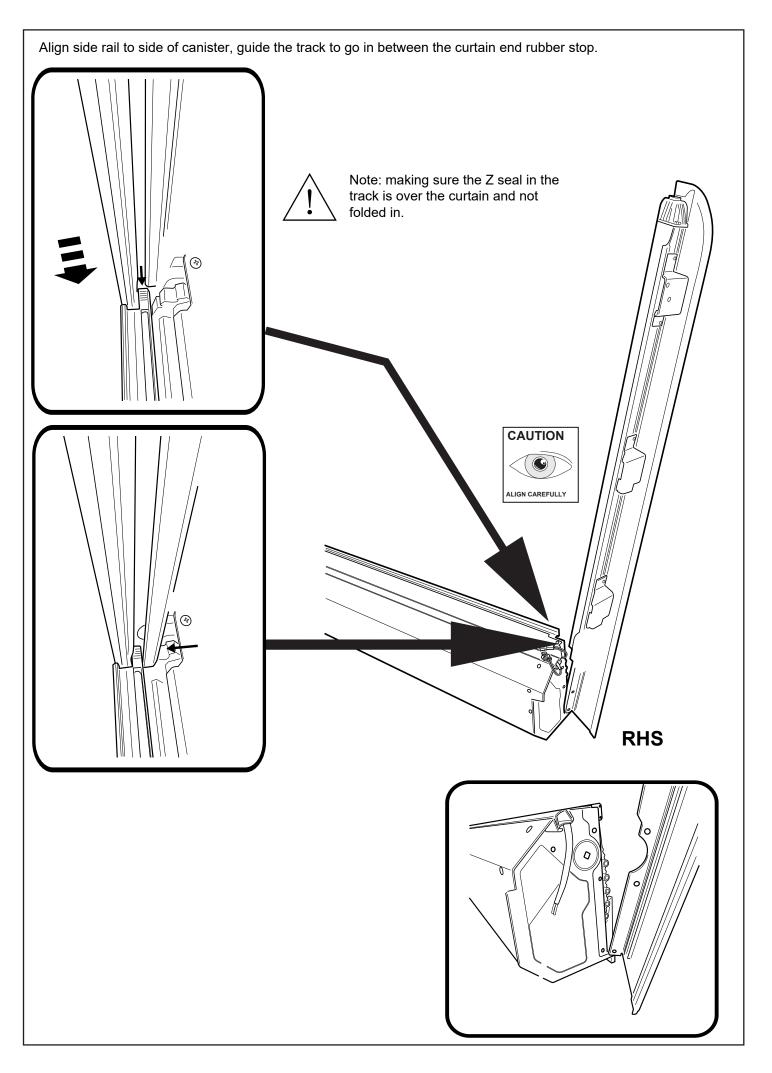


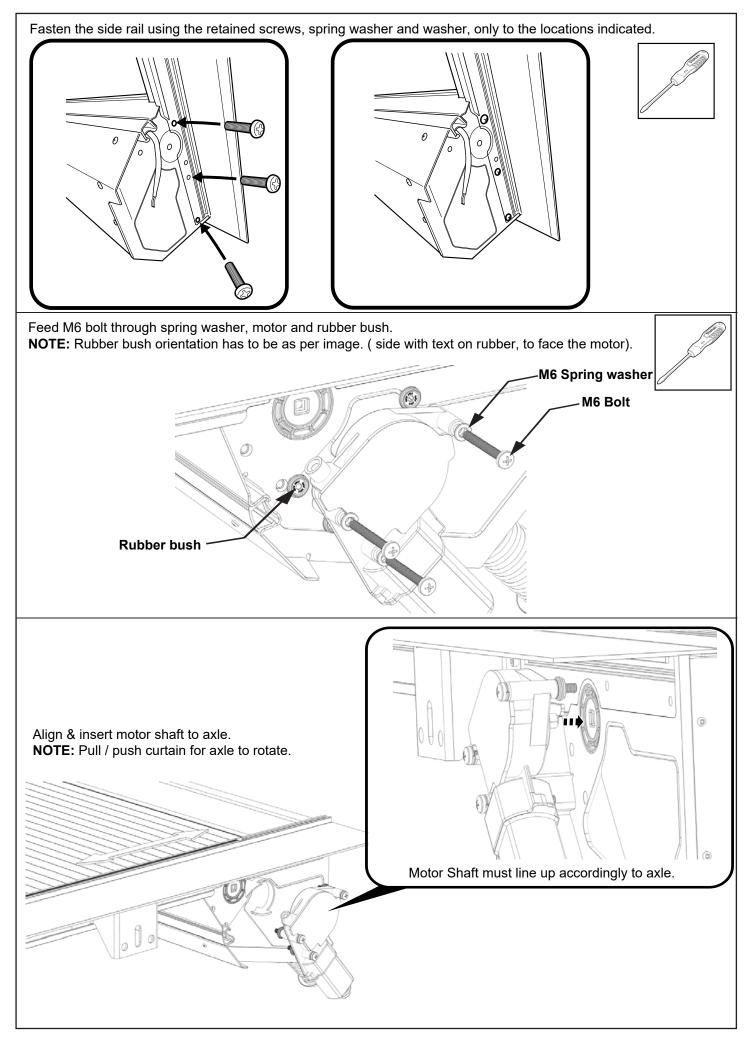

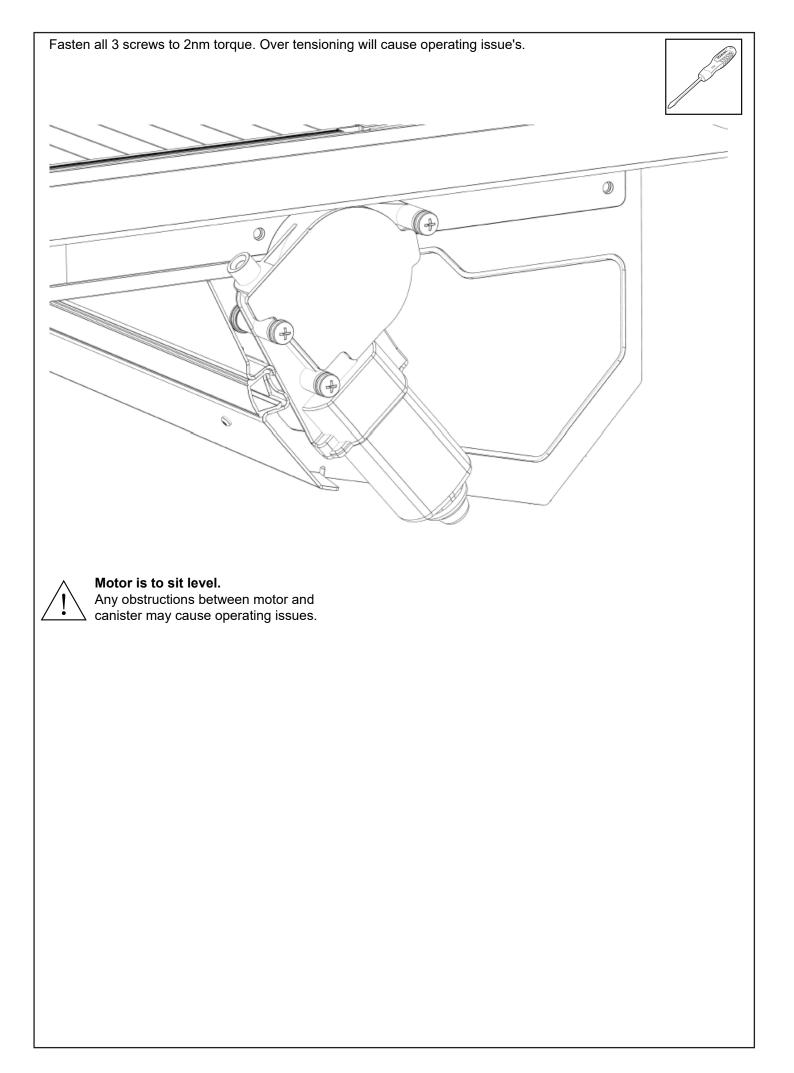


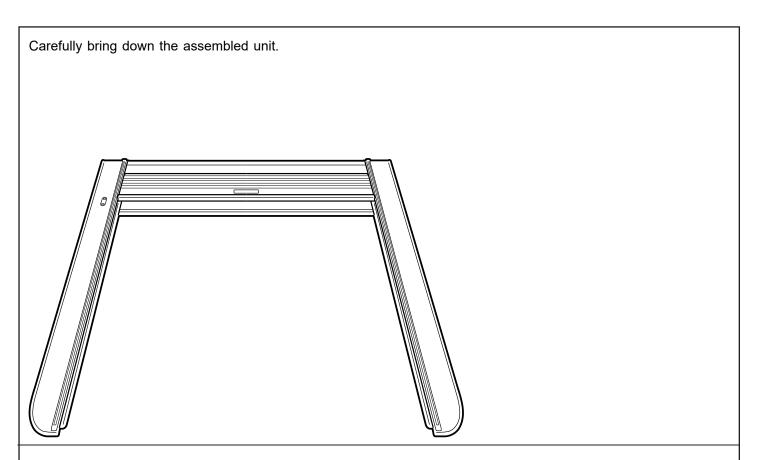

Insert side end caps to the top cover.

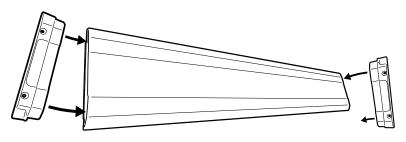



Place & Align top cover over the canister and side rails.

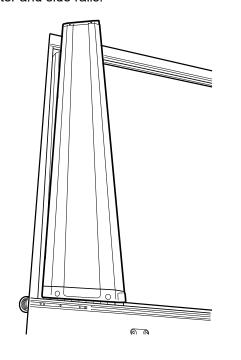



Using countersunk screws provided, line up end cap holes to the threads on the side rail.

Fasten to 3nm torque. Repeat to the other side.

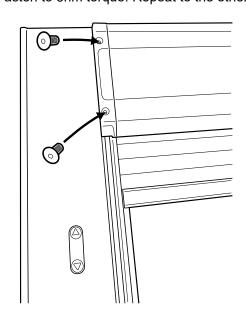

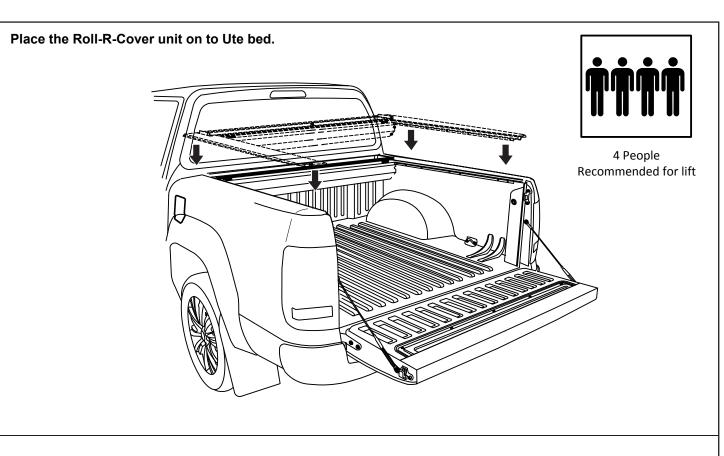


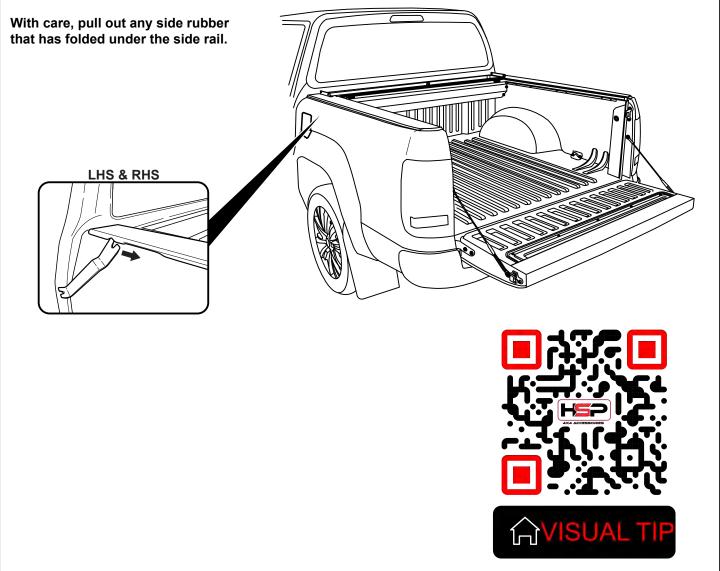


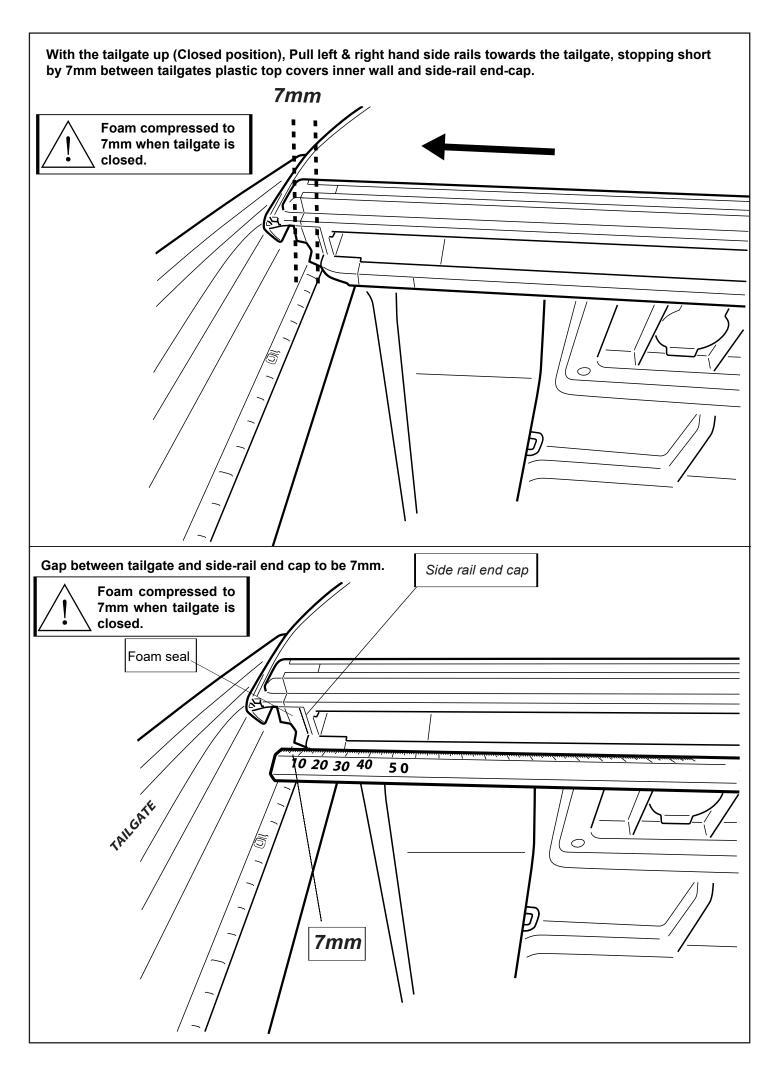


Locate spacers with 1 notch to the areas indicated. Push the spacer up and level with the side rail clamp bracket as indicated. CLAMP BRACKET TRUCK BED PLASTIC TOP RAIL TRIM 0 TRUCK BED SPACER STEEL TOP RAIL o 0 o **∥**₀ 0 ₀/ (O) | |


Locate spacers with 2 notches to the areas indicated. Note: refer to image for orientation of spacer. Push the spacer up and level with the side rail clamp bracket as indicated. 0 o 0 o $0 \circ$ (O) 0 | |

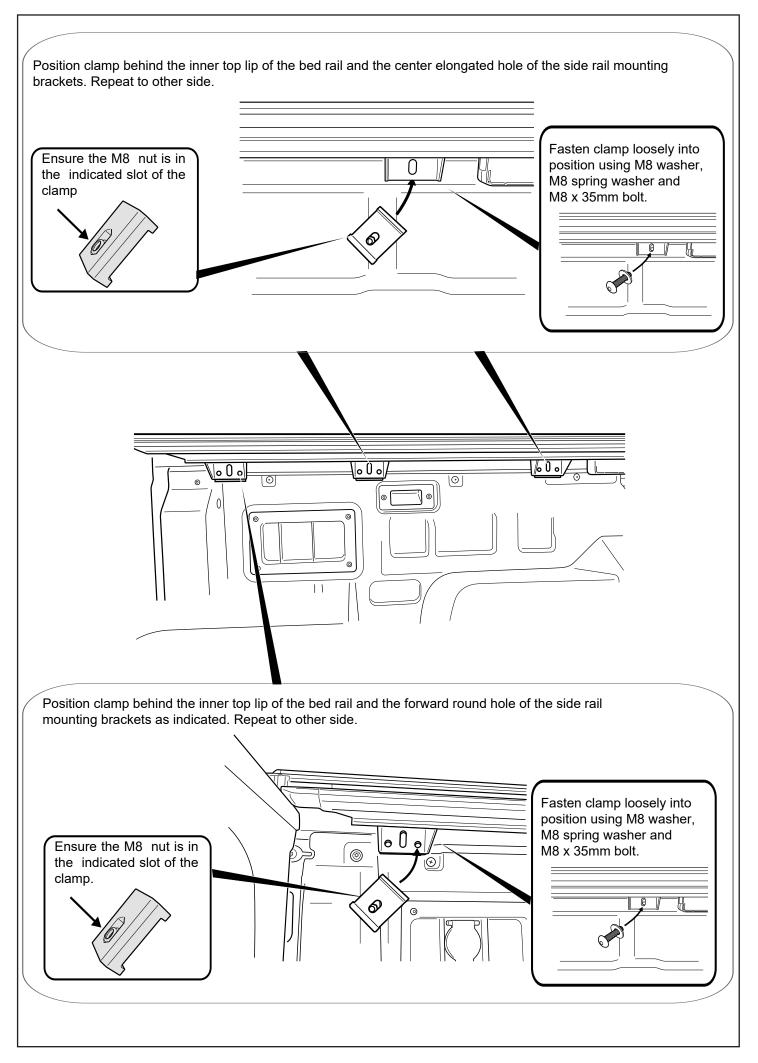


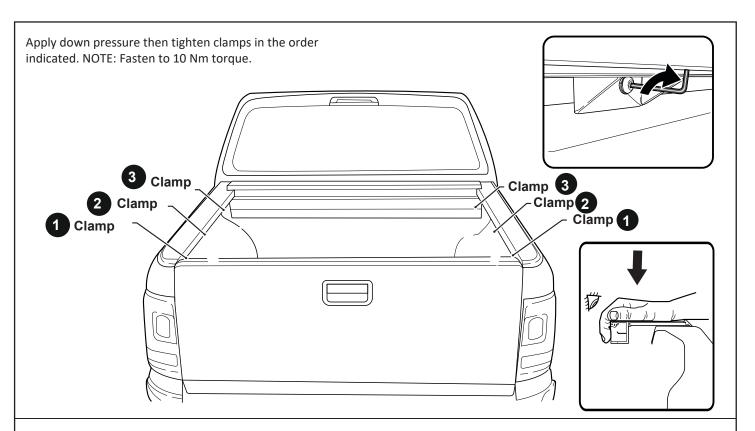


- 1. Apply protective tape behind indicated pre-insatlled nutsurt.
- 2. Feed M8 nut into M8x35mm bolt and through clamp bracket's pre-installed nutsurt as indicated.

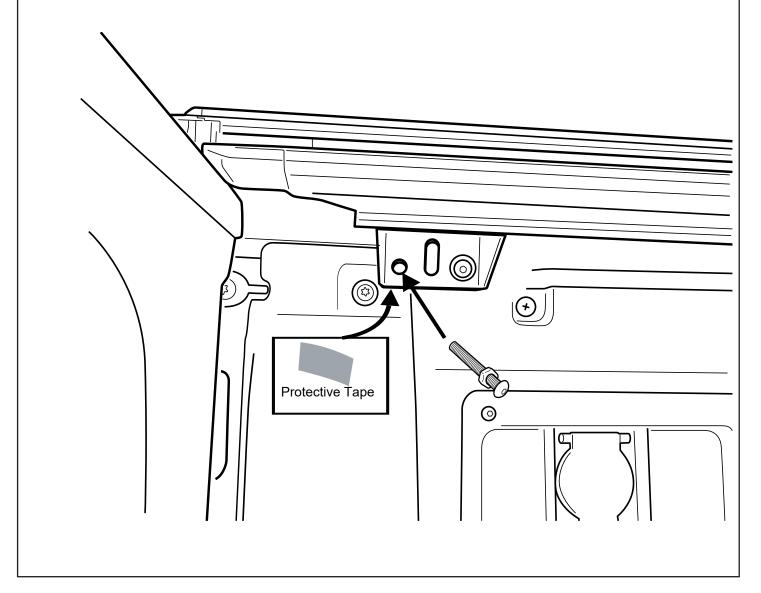

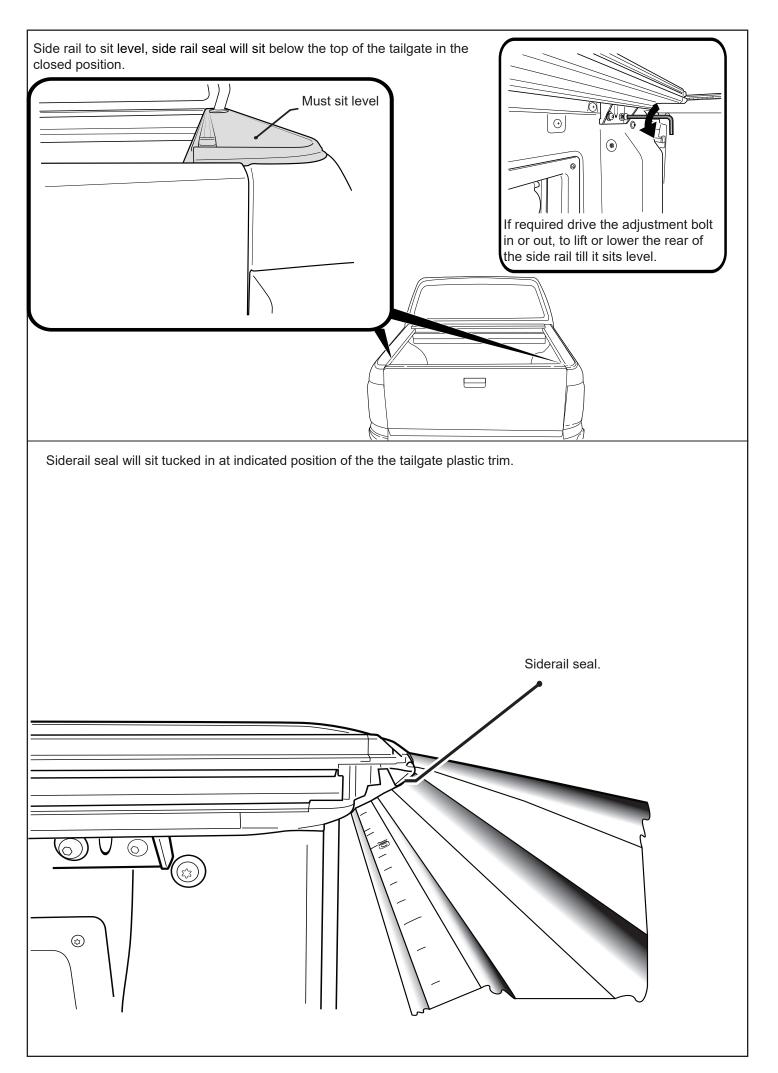

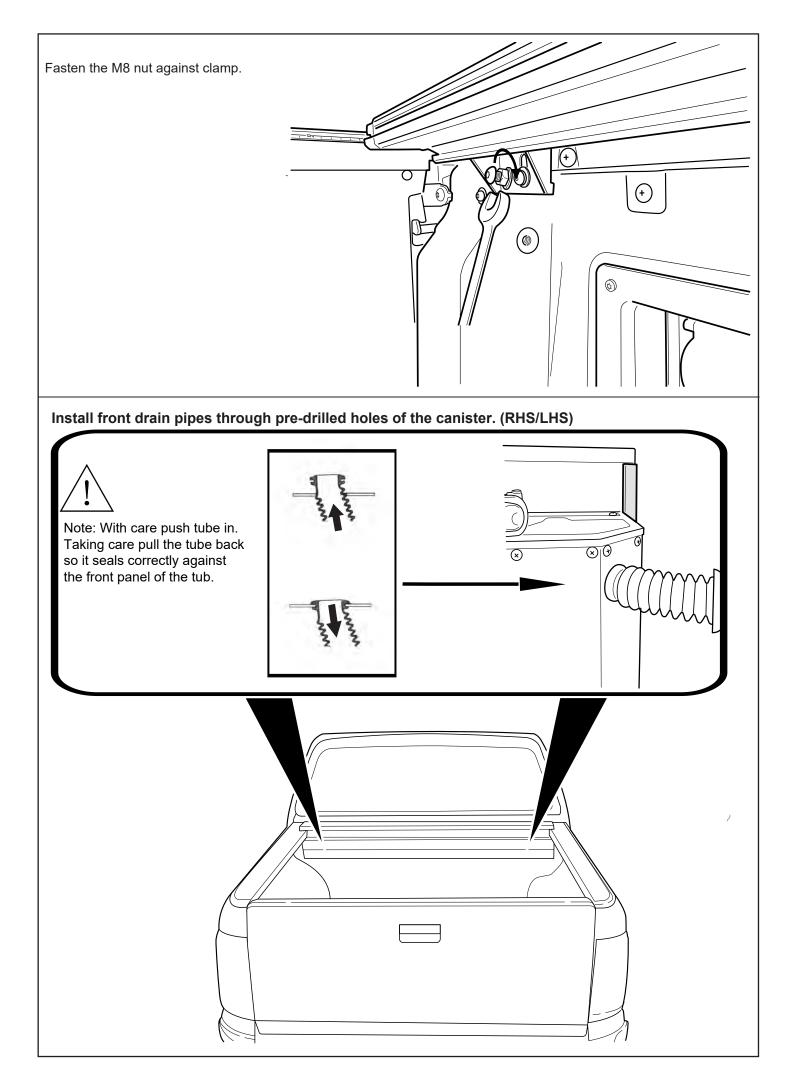

- a. Connect Battery loom S2.75 to Receiver loom.
- b. Carefully connect Cl-Loom-short to Receiver loom.

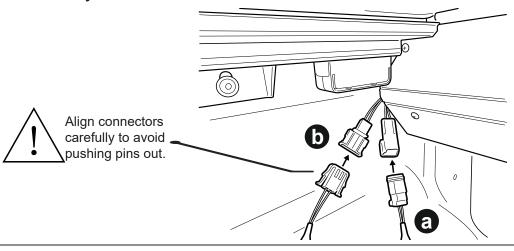



NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

Operating instructions:

Press unlock on vehicle key fob to activate controller.

When vehicle is unlocked the side rail sensor buttons will be active to control.

When vehicle is locked the side rail sensor buttons will be inactive.

Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open. Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.



Vehicle proximity:

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

