RHINO-RACK

## Rhino Rack Lockable Tie Down RTD25/35/45/55L

Place these instructions in the vehicle's glove box after installation is complete.

Important:	Please read these instructions carefully prior to installation. Check the contents of kit before commencing fitment and report any discrepancies
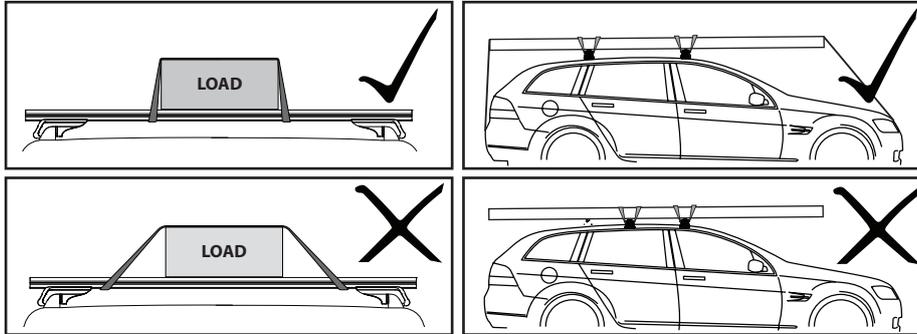
CAUTION:

Must NOT be used for lifting. Always inspect prior to use. Protect from friction and abrasion. Do NOT use strap if it is damaged. For excessively long loads, use additional straps to secure the load at the front and rear of the vehicle (optional accessory RBAS). This product is designed to aid in the safety of transporting long items (i.e. Kayaks) and **not to be used for towing or pulling applications**. Special consideration must be taken when selecting your fixing point. Rhino-Rack does not take any responsibility for damage to the vehicle that may be caused by this product on paintwork, panels and fixing hardware. Although they are designed with the softest materials in mind to minimise this damage, they cannot take into consideration the variation of panel gaps and wind flapping issues. It is the users responsibility to ensure that the strap is used in accordance with these fitting instructions.

Parts List

| Available Sizes |
|---|
| **Black** Tie Down Locking Straps (2.5m) - RTD25L |
| **Black** Tie Down Locking Straps (3.5m) - RTD35L |
| **Black** Tie Down Locking Straps (4.5m) - RTD45L |
| **Black** Tie Down Locking Straps (5.5m) - RTD55L |
| **Note:** All sizes sold as separate. **Max carrying capacity 225kg/ 496lbs.** |

	Parts List	Qty	RTDXXL
1	Tie Down	2	CA1559
2	Lock Barrel/Key	2	CA1339
3	Cam Buckle Cover Locking	2	M752
4	Velcro Storage Strap	2	-
5	Cable Tie (display only)	2	-
6	Instructions	1	R851

Note: RTD25L,35L,45L and 55L sold as separate. Be sure to purchase the correct length to meet individual needs.
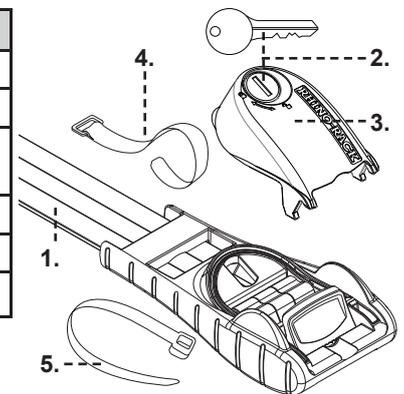
Instructions

1 Remove the Lockable Cap with the Metal Key provided.

1.

2.

2 Depress and hold down the Locking Tab on the Assembly.

Locking Tab.

Depress and hold Tab.

3 Pull the end of the Strap through the Assembly as shown.
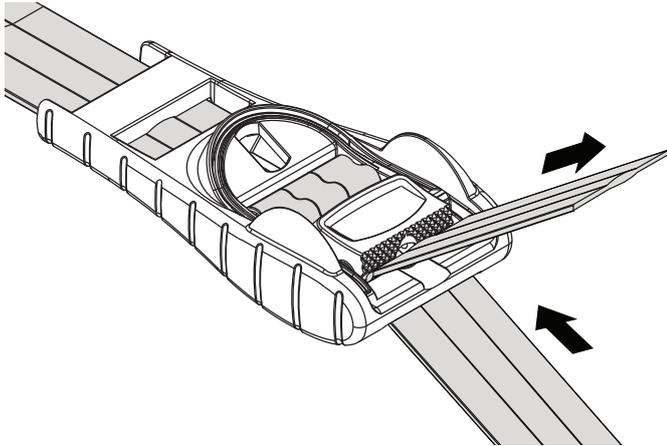
4 Release the Locking Tab. The Strap will now be held in place.

The Strap is now locked in position.
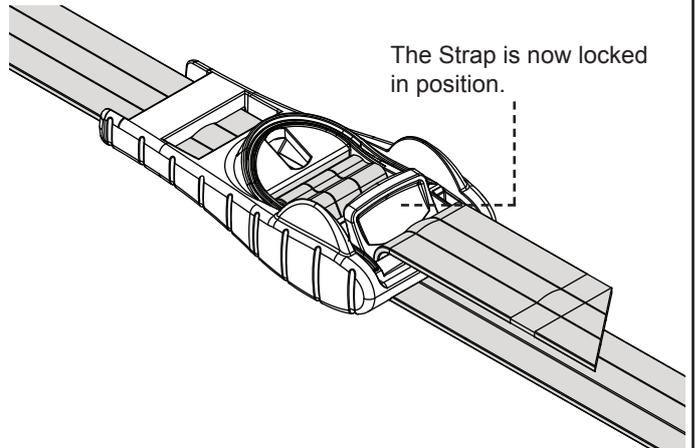
5 Replace the Locking Cap into the Strap Assembly. The Tabs on the Locking Cap slip into the Housing Slots on the Assembly.

Tabs.

Housing Slots.
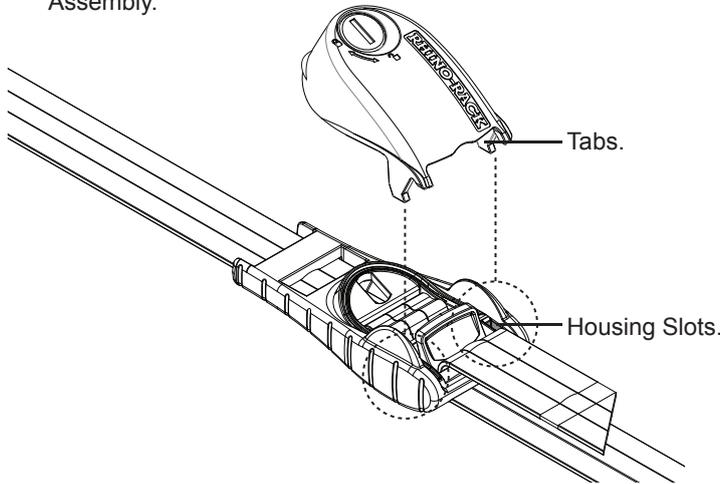
1: Place the Tabs on the Locking Cap into the Strap Assembly on an angle as shown.
2: Rotate the Cap downward to sit in place on the Strap Assembly.

1.

2.

CLICK!
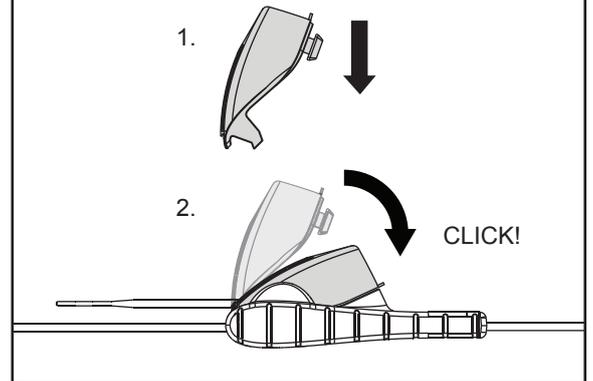
6 Use the Key provided to secure the unit. Be sure all loads are secure before use. Re-tension if necessary.

Ensure edges are seated correctly.
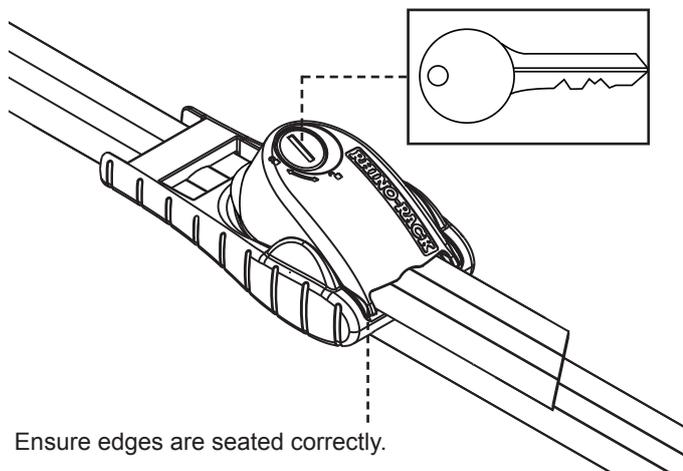
7 For easy storage, firstly roll up the Strap. Loop a Velcro Storage Strap around the assembly as shown. Tighten the Velcro Storage Strap.
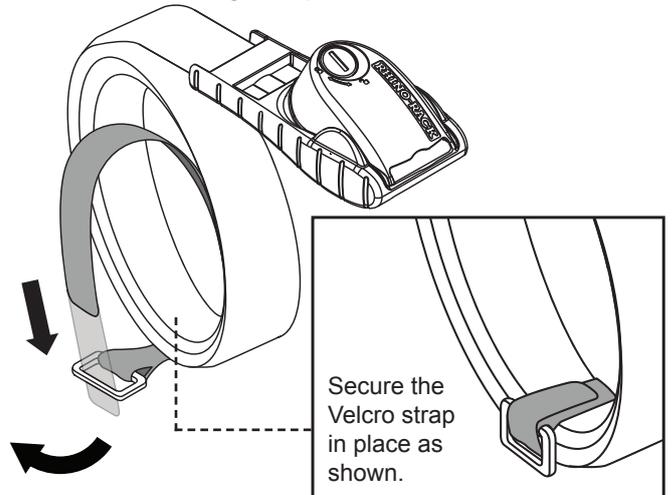
Secure the Velcro strap in place as shown.

Display Instructions

1

1: Open the Main Flap.
2: Open the Side Flaps.

1:

2:
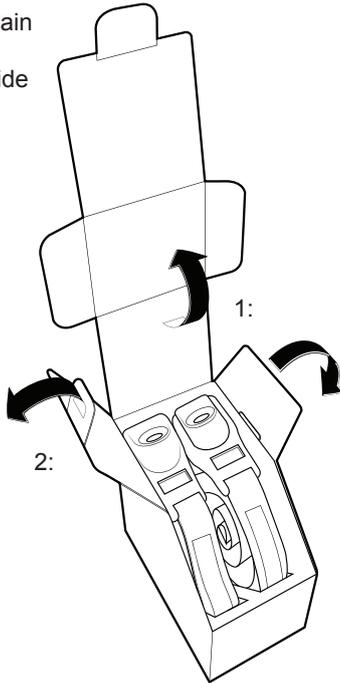
2

Slide both Cable Ties through the top of the Side Flap as shown.
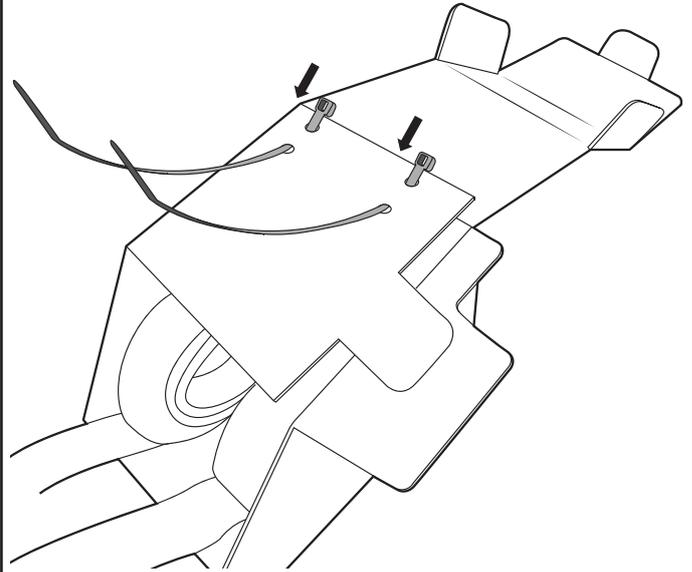
3

1: Slide a Cable Tie through the bottom of the Cam Buckle and out through the top of the Assembly.
2: Tighten the Cable Tie.

1:

2:
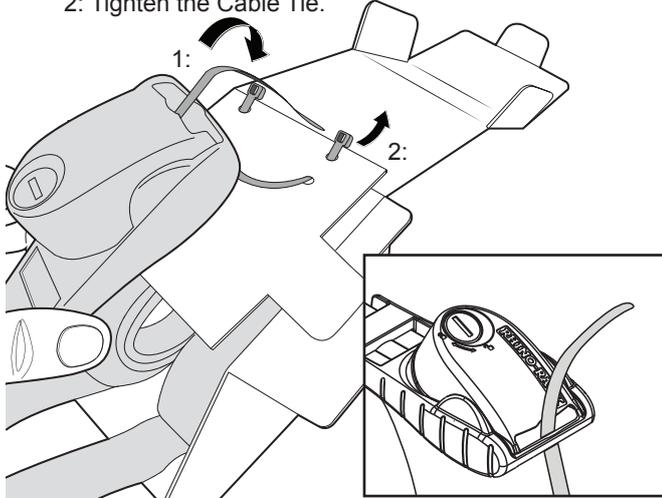
4

Using Cutters, remove the excess Cable Tie.
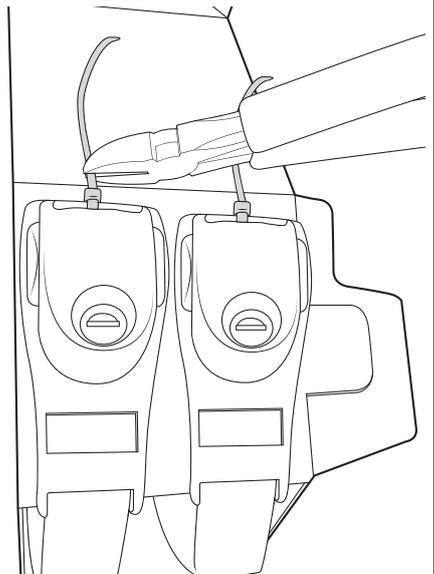
5

1: Fold the Main Flap back down.
2a: Fold the BottomSide Flap down.
2b: Fold the Top Side down.

1:

2b:

2a: