



RHINO-RACK

739A Rhino Commercial - False Gutter Fiberglass Gutter Mount Adaptor Kit

Place these instructions in the vehicle's glove box after installation is complete.


Important: Please read these instructions carefully prior to installation.
Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
For fitting of the leg to the false gutter, refer the leg fitting instructions.

Important: Check the contents of kit before commencing fitment and report any discrepancies.


Parts List

Item	Component Name	Qty.	Part No.
1	M6 Nyloc Nut	12	N013
2	M6 x 12.5mm Flat Washer	12	W003
3	2mm Backing Plate	4	C247
4	Foam Gasket	4	C135
5	2mm Mounting Bracket	4	C246
6	M6 x 25mm Cup Head Bolt	12	B049
7	Fitting Instruction	1	RR50


Rhino Leg Part Number Reference:
RL110-S2, RL150-S2, RL210-S2, RL280-S4

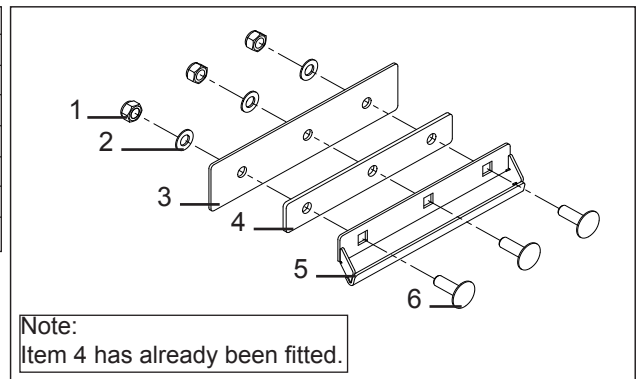


1 Position the false gutter onto the vehicle, canopy ensuring that the gutter bracket is level. Mark Hole positions.

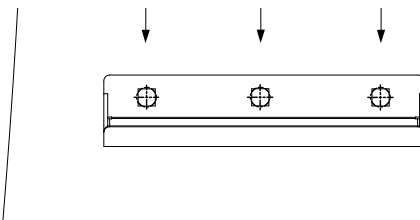


2 Drill the holes using a 6.5mm drill bit. Use a dowelling twist or equivalent drill. Clean all loose material from around the holes and surface.

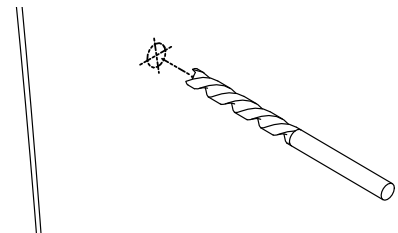


3 Assemble the M6 x 25mm coach bolts through the false gutter, foam backing gasket (which has been already fitted) and drilled holes. Check that the square on the bolt is inserted into the square hole in the false gutter.

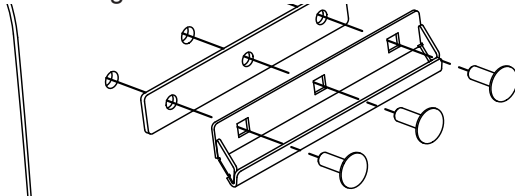

4 Assemble the backing plate, washer and nyloc nut onto the bolt and tighten nut.

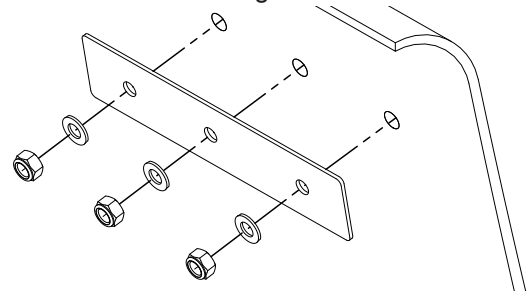

5 Check that all false gutters are secure prior to fitting the legs.

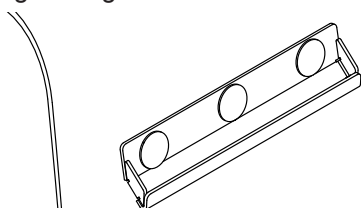

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Document No: RR-50
Prepared By: Sheila Oliveira Issue No: 04
Authorised By: Chris Murty Issue Date: 01/11/2017

These instructions remain the property of Fetovu Pty Ltd
T/as Rhino-Rack and may not be used or changed for any
other purpose than intended.