


'Piranha Off Road products are not associated in any way with Toyota Australia or any of its related companies'

To Suit LANDCRUISER 100 SERIES 1HDFTE 6 Cyl 4.2 TDI (Third Tray)



PART NUMBER	BT100R
APPROX FITTING TIME	2 Hours
MAX BATTERY SIZE	265mm L
MAX BATT WEIGHT	21Kg
CYCLE DUTY	
TRAY LOCATION	PSR

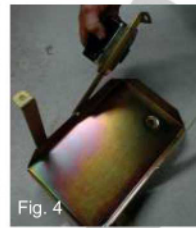

FITTING INSTRUCTIONS

1. Remove fuel filter/primer & bracket (See Fig.1)
2. Remove computer & bracket (See Fig.1)
3. Remove small black fuel filter (See Fig.1)
4. Remove all wiring on inner guard & re-run around where tray will sit (See Fig.1)
5. Unbolt fuel line bracket from inner guard. (Nut under wheel arch) (See Fig. 3)
6. Mark rear arm for computer & drill the two holes that are needed (See Fig. 4)
7. Mount computer to tray
8. Place tray in place & manipulate air/con line to gain clearance on upper mount (See Fig. 5)
9. Using 2x M8 short align & bolt both upper arms (See Fig. 6)
10. Using M6 bolts align & bolt 3 mounts in lower tray, ensuring to use a M6 c/sunk in tray mount (See Fig. 6)
11. Plug computer back in & tighten all tray mounting bolts
12. Place fuel filter bracket between tray & firewall & bolt to tray (See Fig. 7)
13. Drill lip in firewall for bracket (wiring loom can be unbolted & moved so you dont drill through it)
14. Bolt bracket using M6 bolt & nut
15. Manipulate fuel lines & re-bolt filter/primer to new bracket
16. Align small black fuel filter against tray & drill hole for mounting, then mount using weld bolt to allow clearance on battery (See Fig. 8)
17. Place battery into position & affix into position using top mount.

PARTS INCLUDED WITH TRAY

- 1 X Tray
- 4 X M6 Bolt
- 1 X M6 Bolt (Countersunk)
- 5 X M6 Nut
- 3 X Body Washer
- 1 X M6 Weld Bolt
- 2 X M8 Bolt Long
- 2 X M8 Bolt Short
- 2 X M8 Nut
- 1 X Universal Top Mount
- 2 X J Bolt

RECOMMENDED ISOLATOR

DBE140SF
or
DBE180-SX

Ensure, before closing the bonnet that all items fitted have adequate clearance