

'Piranha Off Road products are not associated in any way with FORD Motor Co of Aust Ltd or any of its related companies' 'Piranha Off Road products are not associated in any way with MAZDA Australia Pty Ltd or any of its related companies'

To Suit MAZDA B2600 / FORD COURIER 2.6L PETROL EFI

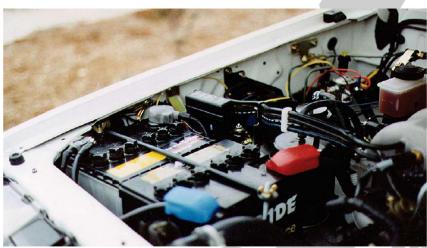

FOR SELF FIT



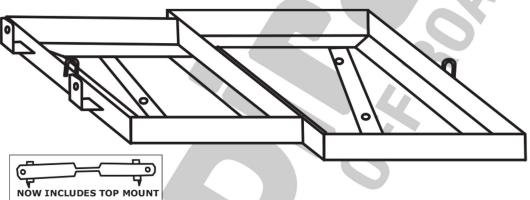

PARTS INCLUDED WITH TRAY

- 3 X M6 Bolts Countersunk
- 2 X M8 Bolts Short
- 2 X J Bolts
- 1 X Special Top Mount

FITTING INSTRUCTIONS

The cradle fits drivers side front replacing the existing tray.

Check to make sure that the original lower support bracket is in sound condition. If the bracket is cracked, fix it first before continuing with the cradle installation. The dual cradle utilises the original captive nuts in the lower bracket. Six M8 bolts hold the cradle in position. Sometimes the radiator support bracket has to be modified, so that the dual cradle can be installed. Two battery hold downs are provided.

RECOMMENDED ISOLATOR

DBE140SF or DBE180-SX

Ensure, Before closing the bonnet that all items fitted have adequate clearance