

Provent Catch Can Kit for LDV T60 (2017-on) 2.8L Turbo Diesel 4Cyl. I6V VGT + Intercooler


KIT No: OS-PROV-3I




WARNING: Engine damage will occur if incorrectly connected. Please follow Installation Guide

Mann Provent 200 Catch Can Kit Install Guide


- STEP 1:** Ensure Engine is OFF and cool enough to work on. Remove cover.
- STEP 2:** Identify Install Area - drivers side of engine bay
- STEP 3:** Use OEM Bolt to secure Bracket
 - Place bracket base under fitting, slip washer on to bolt, screw in
- STEP 4:** Swivel Provent ports in to position
 - Fit Clear Drain Hose to the Base of the Provent 200 unit secure with hose clamp
 - Feed Hose down between engine bay - Ensure Tap is OFF.
- STEP 5:** Bolt Provent on to Bracket
 - Place Provent in to position, then bolt on to bracket.

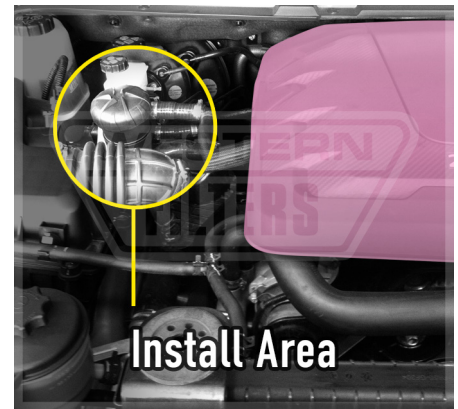


STEP 2:

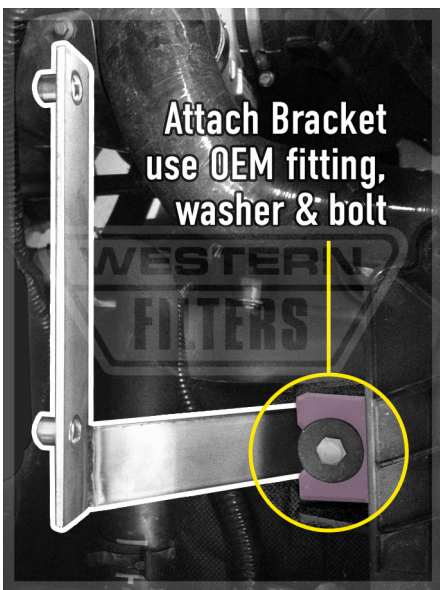

STEP 3:

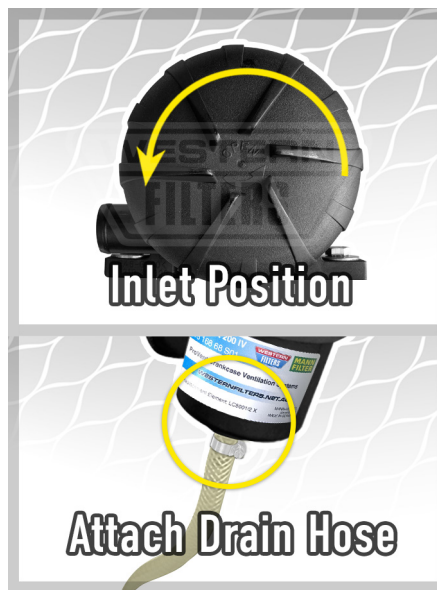

STEP 4:

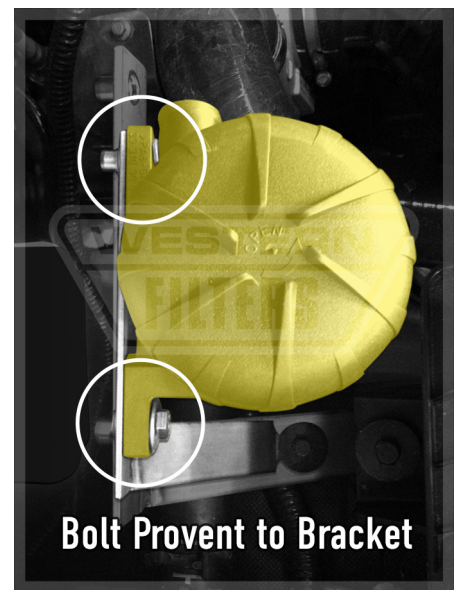

STEP 5:

Provent Catch Can Kit for LDV T60 (2017-on) 2.8L Turbo Diesel 4Cyl. I6V VGT + Intercooler

KIT No: OS-PROV-31

STEP 7: Remove OEM Breather Hose
- from between the top of the Crank Case and the Air Intake.

STEP 8: Fit Short Hose from Provent's Lower Outlet to the Air Intake
- secure with provided hose clamps.

STEP 9: Fit Longer Hose from Provent's Top Inlet to Crank Case Outlet
- secure with provided hose clamps.


STEP 10: Use Cable Ties if required.

STEP 11: Return engine cover


NOTE: Once installed, the lid of the Provent unit can be easily removed for observation purposes.

For additional instructions view our installation video:


[Prov-31 Installation Video >](#)

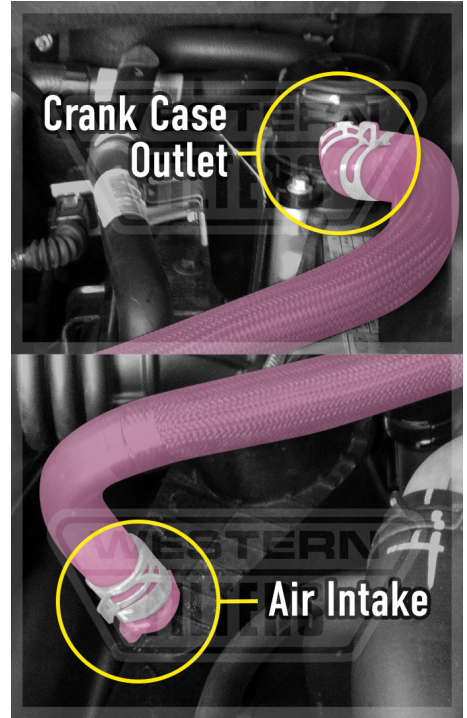


STEP 7:

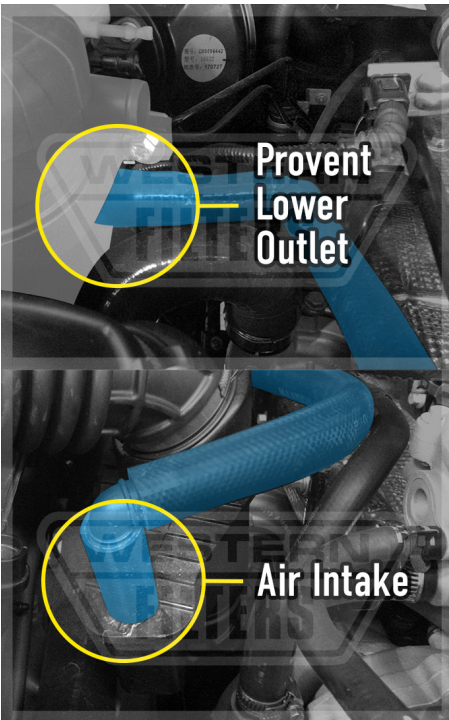

STEP 8:

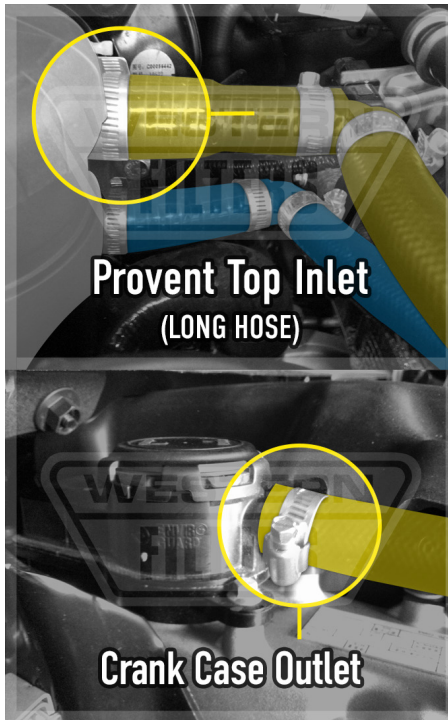

STEP 9:

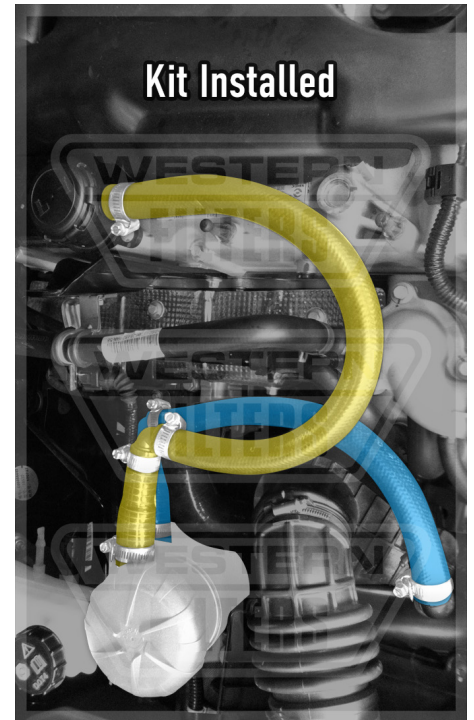

STEP 10: