



RHINO-RACK



Aerodynamic & Heavy Duty Roof Rack Systems

RJBSW - Rhino J Bolt Spare Wheel Holder

Important: Please read these instructions carefully prior to installation. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations. Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.

Parts List

Item	Component Name	Qty	Part No.
1	Rhino J Bolt Long	1	C578
2	Wheel Brace Plate	1	C648
3	Wing Nut	1	C649
4	M12 x 24mm Flat Washer	1	W045
5	Fitting Instruction	1	RS-343

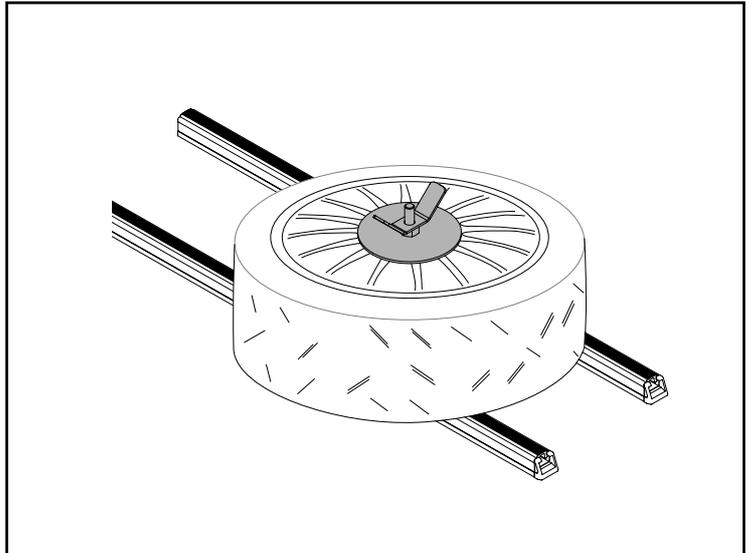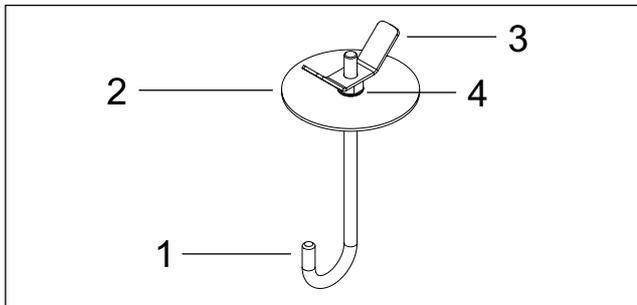

Tools Required: 19mm Spanner or 19mm Wheel brace.


NOTE: Rhino J Bolt Spare Wheel Holder is to be fitted to Rhino cross bars only.

1 Remove Wing Nut & Plate

Remove Wing Nut and Wheel Brace Plate before hooking around the Rhino bar.

J Bolt must completely hook around the bar

DO NOT locate J Bolt this way

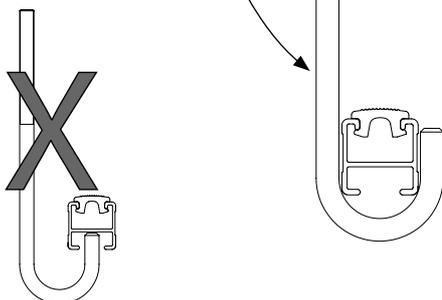

2 Attach the wheel.

The cross bars will need to be adjusted to a suitable width apart for the wheel to rest on. Lay the spare wheel on the bars and feed the J Bolt through the centre of the wheel, or one of the wheel stud holes if required. Place the Wheel Brace Plate over J Bolt and fasten in place with Wing Nut as detailed below.

